

 $\mathsf{DS}\;\mathsf{Implants}^{\scriptscriptstyle{\mathsf{TM}}}$

DS PrimeTaper[™]

Surgical manual and product catalog



This manual is designed for use by clinicians who have undergone at least basic prosthetic and in-clinic implant training. Staying current on the latest trends and treatment techniques in implant dentistry through continued education is the responsibility of the clinician.

All products may not be regulatory cleared/released/licensed in all markets. Please contact the local Dentsply Sirona sales office for current product assortment and availability.

To improve readability for our customers, Dentsply Sirona does not use $^{\circ}$ or $^{\text{TM}}$ in body copy. However, Dentsply Sirona does not waive any right to the trademark and nothing herein shall be interpreted to the contrary.

Product illustrations are not to scale.

CONTENTS

1. Introduction to DS PrimeTaper	4
Implant design	4
Color coding	5
Implant-abutment connection	5
Restorative solutions.	5
2. Treatment planning	6
Conventional treatment planning	6
Computer-guided treatment planning	6
Clinical application	7
3. Instruments	8
Drills	8
Implant drivers	10
Torque wrench	11
Hex drivers	11
Surgical tray	12
4. Implant site preparation	14
Drilling protocol	14
Implant site preparation procedure	16
5. Implant packaging	18
6. Implant installation	19
One-stage surgical protocol	20
Two-stage surgical protocol	21
Torque guide	21
DS PrimeTaper product catalog	22
Implants.	
Cover screws	
Healing abutments	24
Instruments	26
Trays	28
Other surgical instruments	
Material specifications	31
Index	.32

1. Introduction to DS PrimeTaper


Implant design

The DS PrimeTaper implant is designed with a progressive taper and thread for optimal primary stability. The implant's key features – EV connection with Conical Seal Design, OsseoSpeed, MicroThread, Soft Tissue Chamber – are documented and clinically proven with the Astra Tech Implant System EV for bone maintenance and esthetics.




Soft Tissue Chamber

A three-dimensional chamber created between the horizontal offset on the implant and the outer design of the abutment. This chamber allows for an increased soft tissue contact zone and increased soft tissue volume, sealing off and protecting the marginal bone.

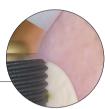

MicroThread

- Minute threads on implant neck that offer optimal load distribution and stress values.
- MicroThread ensures positive bio-mechanical bone stimulation and maintained marginal bone levels over the long-term.

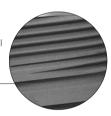

EV Connection with Conical Seal Design

 Seals off the interior of the implant from the surrounding tissue, minimizing micromovements and microleakage.



OsseoSpeed

 A chemically modified titanium surface with a unique nanoscale topography that stimulates early bone healing and speeds up the osseointegration process.



Progressive taper and thread design

- Stabilizing and contributing to initial stability and cutting efficiency.
- The thread and flute design provide enhanced cutting efficiency and gentle bone management.



Color coding

The DS PrimeTaper Implant line is available in different diameters and lengths. The color coding makes it easy to identify the correct connection and to select the right prosthetic components.

Implant Ø mm	3.6	4.2	4.8	5.4
Connections	S	M	L	L
Lengths mm	-	6.5	6.5	6.5
	8	8	8	8
	9	9	9	9
	11	11	11	11
	13	13	13	13
	15	15	15	15
	17	17	17	-

Implant-abutment connection

The implants have a unique interface providing three different options for abutment placement/indexing.

- One-position-only
 - Atlantis patient-specific abutments will seat in one position only.
- Six positions
 - Indexed abutments will seat in six available positions.
- Non-indexed
 - Non-indexed abutments will be seated in any rotational position.





Restorative solutions

The implants portfolio offers prefabricated and patient-specific abutments. Restorations include prosthetic options on implant and abutment levels. Various types of fixation possibilities e.g. screw-, cement-, friction- and attachment-retained restorations.

2. Treatment planning

Pre-operative planning should be based on the expected restorative treatment outcome. Therefore treatment planning should include all stages of the procedure, from healing time and components to temporary and final restorations.

The treatment planning is based on a comprehensive consultation with the patient to determine exactly what the patient wants and expects from the treatment, but also to discover any possible contraindications and to explain the treatment in detail to the patient.

It is followed by a complete general and specific medical history and intraoral examination with analysis of the initial anatomical situation.

The following points must be considered:

- Medical and dental history
- General diagnoses exclusion of contraindications
- Specialist consultation for risk factors
- Detailed intraoral examination including general radiographic examination

After examination and evaluation of the diagnostic documentation, the treatment plan should be prepared.

Even though the final treatment approach may be determined at the time of surgery, consider the following based on the quality of supporting bone and expected initial stability of the implant(s):

- One- or two-stage surgical procedure
- Immediate or early loading protocol
- Expected healing time before loading

When determining time to loading of implants for each individual case, the following should be carefully examined and assessed:

- Bone quality and quantity
- Primary stability
- Design of restoration
- Loading conditions

Before treatment begins, the patient should be informed about the results of the pre-operative examination and given a clear explanation of what the planned treatment entails, including the expected outcome, maintenance requirements and risks involved.

Accurate planning of every implant procedure is essential for the long-term success of the treatment. The planning process defines all actions and lists alternatives that can meet the patient's expectations of the function and esthetics of the implant-prosthetic rehabilitation.

Conventional treatment planning

A diagnostic wax-up with the missing teeth replaced provides important information in the planning phase.

Based on analysis and evaluation of the occlusal table, force distribution and preferred sites for the implants, an optimal plan can be achieved.

The diagnostic wax-up and radiographs make it possible to plan implant position, angulation and size in order to support the planned prosthetic construction in an optimal way.

A surgical guide can be manufactured and used during surgery to aid the implant installation.

Computer-guided treatment planning

Digital treatment planning based on three-dimensional imaging procedures enables the therapy to be planned with accuracy and makes the implant placement procedure predictable and precise.

Clinical application

The implants are used for both one- and two-stage surgical procedures in the following situations and with the following clinical protocols:

- Replacing missing teeth in single or multiple unit applications in the mandible or maxilla.
- Immediate placement in extraction sites and in situations with a partially or completely healed alveolar ridge.
- Especially indicated for use in soft bone applications where implants with other implant surface treatments may be less effective.
- Immediate and early loading for all indications, except in single tooth situations on implant shorter than 8 mm or in soft bone (type IV) where implant stability may be difficult to obtain and immediate loading may not be appropriate.

Based on mechanical strength considerations it is recommended to always place the widest implant possible for the edentulous space. This is particularly important in the posterior regions of the jaws where loading forces are high and considerable bending moments could be generated.

In all cases it is important to consider loading conditions when determining the number and spacing of implants.

3. Instruments

Drills

The implant site is prepared in accordance with the drilling protocol to ensure simple and safe implant placement in all bone qualities.

Guide Drill

Used to mark a starting point



Precision Drill

- Used to mark a starting point
- Note: The Precision Drill is an extremely sharp drill for single use only. Once out of its package it should never be handled manually or placed on the tray.



PrimeTaper Drills

- For implant site preparation up to the planned implant diameter
- Depth marked
- Multiple use with option for single use
- Marked with the respective diameters and numbers (1-7)
- Available in two lengths:

Drill short Drill long






The effective drilling depth is maximum 1 mm more than the implant length, indicated by the depth marking.

PrimeTaper Taps

- For very dense bone preparation
- Depth marked 6.5 mm
- Multiple use with option for single use



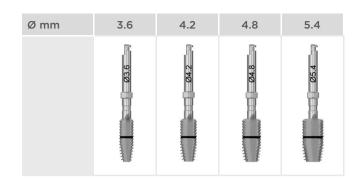

Intermediate drills

- Intermediate twist drills for fine-tuning the diameter of the osteotomy
- Depth marked
- Multiple use with option for single use
- Marked with the respective diameters
- Available in two lengths

Ø mm 2.65 3.25 3.85 4.45 5.05

Drill number 2½ 3½ 4½ 5½ 6½

8 8 8 8 8 8

All drills except the Precision Drill can be used for approximately ten cases. They should be carefully cleaned and sterilized after each surgery and replaced as soon as a decrease in their cutting efficiency is observed.

PrimeTaper Direction indicator


- Used after drill (1) and drill (3)
- Used for visualizing the position and direction of the prepared osteotomy and for measuring the space between osteotomies.

Implant Depth Gauge

- Used for measuring the depth of the implant site
- Markings correspond to the implant lengths
- The other end of the gauge can be used as a measuring probe.

Instrument Extender

- Used for extending the length of a drill or implant driver
- Ensure sufficient irrigation when using the extender

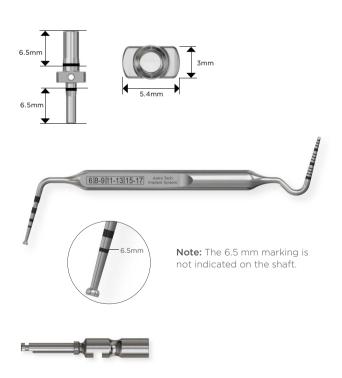



Implant drivers

The implant drivers can be used with a contra angle or with a surgical driver handle and a torque wrench.

Implant Driver EV

- For implant installation
- Color-coded and depth marked
- Available in short and long

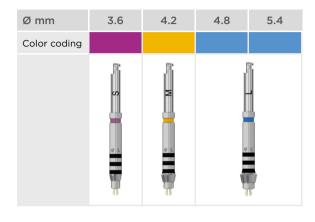

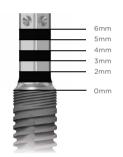

The reference point ("0") of the depth markings is the intended bone level, i.e., the lowest point of the bone level.

To facilitate optimal placement of predesigned abutments, align one of the dots buccally.

Carefully clean and sterilize the driver after each surgery and replace it as soon as any decrease in functionality is observed. The Implant Driver EV can be used for approximately 100 implant installations.

Torque wrench

Torque Wrench EV

- For implant installation and adjustment of the implant position
- Used together with the surgical driver handle




Torque Wrench EV Surgical Driver Handle

Used together with the torque wrench



Hex drivers

 Used for tightening screws, surgical and restorative components

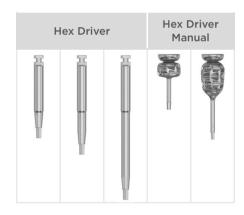

Surgical tray


All instruments for surgical use are stored in the PrimeTaper Surgical Tray, which is designed to make all instruments easily accessible.




QR code for additional information about the surgical tray.





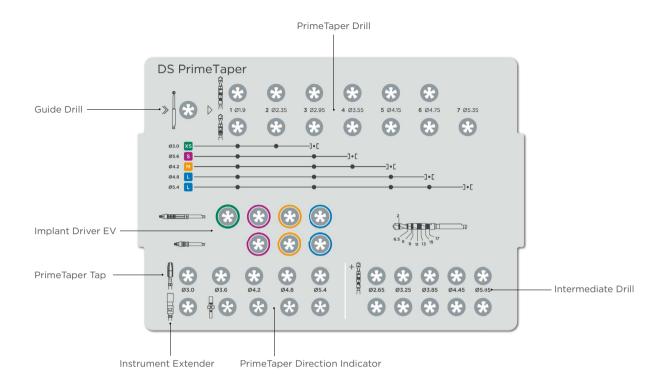

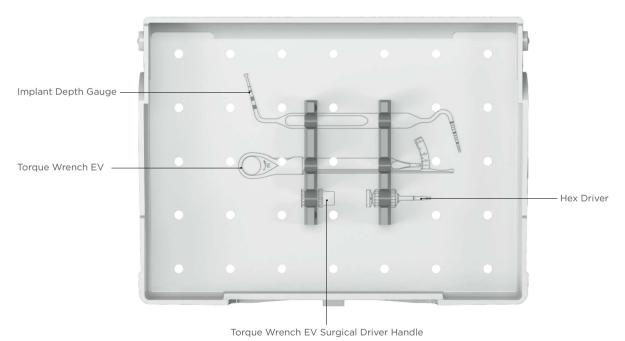

Cleaning and sterilization instructions

Products within DS Implants are designed to be cleaned and sterilized before clinical use with the exception of sterile packed products. The cleaning and sterilization instructions have been developed and validated by Dentsply Sirona in accordance with the applicable standards. For further information and step-by-step procedures, refer to the Cleaning and sterilization instruction manual. For products with other legal manufacturer, see respective product's IFU.

4. Implant site preparation

It is important to obtain knowledge about the bone quality available at the implant site, as it may vary in the maxilla and the mandible. During the planning phase it is also crucial to check that the horizontal and vertical bone volume is sufficient for placement of an implant.

According to Misch¹, Lekholm and Zarb², bone of various qualities can be classified into four classes DI-DIV.



Bone class DΙ Dense cortical bone, almost no spongy bone.



Bone class DII Dense cortical bone, largegrain spongy bone.




Bone class D III Thin cortical bone, finemeshed spongy spongy bone.




Bone class DIV No cortical bone, fine

Drilling protocol

Recommended drilling protocol for soft, medium and dense bone qualities

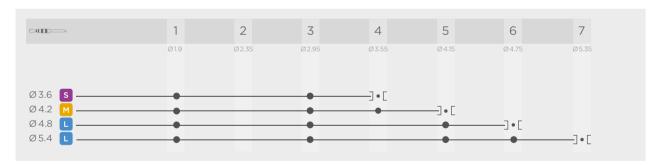


- Figures refer to drill numbers 1-7
-] [refers to cortical preparation only (mandatory)
- Adapt the cortical preparation to the individual thickness of the cortex
- Drilling to the 2 mm marking, using the drill for cortical preparation "] [", will ensure sufficient space for the MicroThread portion of the implant

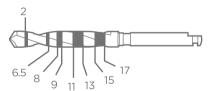

1. Misch CE: Density of bone: Effect on treatment plans, surgical approach, healing, and progressive bone loading. Int J Oral Implantol 1990;6(2):23-31.


2. Lekholm U, Zarb GA: Patient selection and preparation. In: Branemark PI, Zarb GA, Albrektsson T (eds): Tissue-integrated prostheses. Osseointegration in clinical dentistry. Quintessence, Chicago 1985:199-209.

Drilling protocol for very soft bone

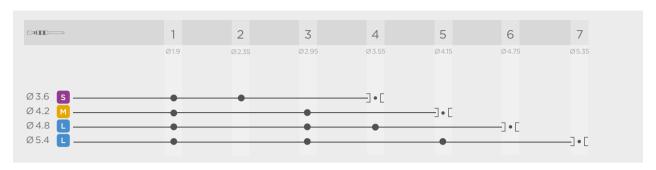

■ May be applicable in extraction sockets

Drilling protocol for very dense bone

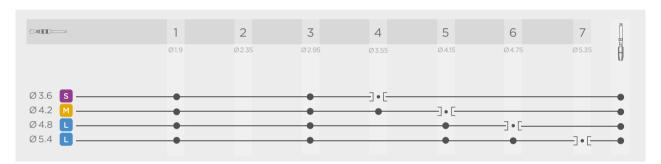

■ Screw Tap is available, used after cortical preparation] [

Osteotomy fine-tuning

Five additional intermediate drills, 2 % - 6 %, are available for fine-tuning the diameter of the osteotomy.

This is useful if you desire a slight widening of the osteotomy or a slight under-preparation, compared to the recommended protocol.

Finalize the osteotomy with cortical preparation] [.

Implant site preparation procedure

The following images show the implant site preparation for PrimeTaper EV \emptyset 4.2 x 11 mm, using the recommended protocol.




Incision

- Make an incision.
- Mobilize and fold back the mucoperiosteal flap.




Marking

- Mark the cortical bone with the Guide Drill or the Precision Drill, to give the next drill a secure starting point.
- Note: The Precision Drill is an extremely sharp drill for single use only. Once out of its package it should never be handled manually or placed on the tray.

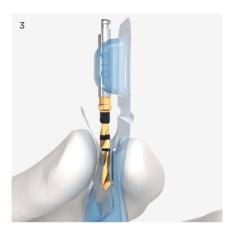


Blister


- Open the package and place the blister onto a sterile area.
- Secure the drill by squeezing the blister.

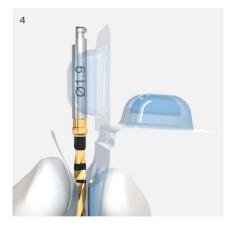

Blister

Expose the drill shaft by bending back the top of the blister.

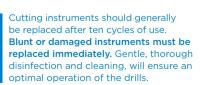

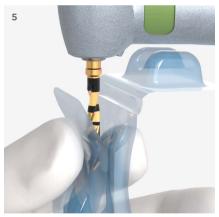

Pick-up


Engage the drill with the contra angle.



Drill 1 Ø1.9

- Drill in the planned direction to the appropriate depth.
- The drilling will provide valuable information about the cortical and spongious bone.
- Insert the smaller end of the PrimeTaper Direction Indicator into the site to visualize/verify the direction.
- Maximum drilling speed is 1500 rpm.

Implant site preparation procedure

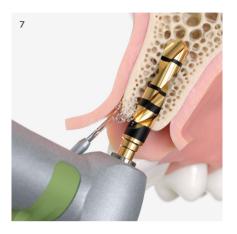

PrimeTaper Drill 3 Ø2.95

- Drill in the planned direction to the appropriate depth.
- Insert the larger end of the direction indicator into the site to visualize/verify the direction.



PrimeTaper Drill 4 Ø3.55

- Drill in the planned direction to the appropriate depth.
- Check the osteotomy depth by using the Implant Depth Gauge.



Measuring the osteotomy

- After drilling, carefully measure the depth of the implant site by using the depth gauge.
- Use the same clinical reference point for the depth as for the planned implant position.
 Note: The depth should allow the implant to be level with or slightly submerged in relation to adjacent marginal bone.






Cortical preparation of the bone - PrimeTaper Drill 5 Ø4.15

1 mm thick cortex

- Cortical preparation is marked with this symbol] [in the drilling protocol.
- Drill through the entire thickness of the cortical bone, in this case 1 mm.

3 mm thick cortex

■ Drill through the entire thickness of the cortical bone, in this case 3 mm.

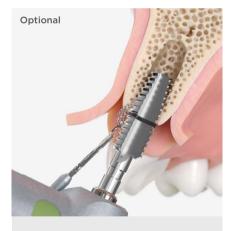

Optional tapping in very dense bone

- Prepare the site with the PrimeTaper Tap Ø4.2 at maximum 25 rpm through the cortical bone. The depth marking indicates 6.5 mm.
- Turn the tap counter-clockwise to remove it from the osteotomy.

Drilling to the 2 mm marking, using the drill for cortical preparation "] [", will ensure sufficient space for the MicroThread portion of the implant.

5. Implant packaging

PrimeTaper EV implants are supplied in a double-blister package with an outer box.



Outer box package

- Implant diameter-specific color coding according to EV connection and implant length information on side labels.
- QR codes accessible on two sides.
- Stackable, all important product information remains visible.
- Instructions For Use (IFU) available electronically (eIFU): ifu.dentsplysirona.com



Blister


- Inner sterile package
- Contains implant container
- Peel-off label with batch code supporting a convenient documentation of the treatment.

6. Implant installation



Implant container

- Open the blister package.
- Pour the sterile inner container onto a sterile area.
- Remove the cap from the container, using a twisting motion to expose the top of the implant

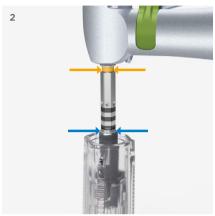

Machine Implant pick-up

- Attach the appropriate Implant Driver EV to the contra angle, see yellow arrows.
- Carefully rotate the driver in the implant to align the indexing tabs.
- Make sure that the implant driver is fully seated into the implant, see blue arrows.



Manual implant pick-up

- Attach the appropriate Implant Driver EV to the Surgical Driver Handle to pick up the implant
- The driver is correctly seated when the color-coded marking is in contact with the handle, see yellow arrows.
- Carefully rotate the driver in the implant to align the indexing tabs.
- Make sure that the implant driver is fully seated into the implant, see blue arrows.



Machine implant placement

- Install the implant with the contra angle at low speed (25 rpm) under profuse irrigation.
- Allow the implant to work its way into the osteotomy. Avoid applying unnecessary pressure. Do not exceed 45 Ncm when installing the implant. If not completely seated before reaching 45 Ncm, reverse/ remove the implant and widen the osteotomy appropriately.



Manual implant placement

Install the implant with the implant driver and the surgical driver handle.



Final positioning

- Attach the implant driver and the surgical driver handle into the torque wrench until there is an audible click.
- Position the implant at the marginal bone level or slightly below.
- Position one of the dots on the implant driver buccally to facilitate optimal placement of the pre-designed abutments.
- Release the implant driver by lifting it gently from the implant.

It is recommend to have a titanium forceps available in case the implant driver does not provide sufficient carrying function during the removal procedure.

One-stage surgical protocol

If a one-stage procedure with transgingival healing is planned without preparation of an implant-supported temporary restoration, the implants can be covered with healing abutments. This is an option where an existing denture can be used as a temporary restoration. Healing abutments are also used for soft tissue sculpturing during the healing phase.





Round shapes are indicated for all positions in the mouth.





Triangular shapes for anterior implant sites to mimic the incisors and canines. The Triangular HealDesign EV is a two-piece abutment.



Placing the healing abutment

- Place the HealDesign EV using the Hex Driver.
- Manually secure the healing abutment using light finger force (5-10 Ncm).



Suturing

Adapt and suture the soft tissue.

An existing temporary denture, such as a clasp denture or a bridge fixed to neighboring teeth, must be modified before delivery to ensure that there will be no pressure on the healing abutment.

Two-stage surgical protocol

If a two-stage procedure is planned, the implant is sealed with a cover screw during the healing phase to prevent the entry of saliva and bacteria.



Placement of the cover screw

- Insert the Cover Screw EV using the Hex Driver.
- Tighten with light finger force (5-10 Ncm).



Suturing

Replace and fix the tissue flaps with sutures.



Exposure

- After the healing phase expose the implant for fabrication of the prosthetic restoration.
- Depending on the planned procedure, place a healing abutment or a temporary restoration.

Torque guide

Recommended installation and tightening torque

Type of product installation	Torque - Ncm
■ Implant placement	Maximum 45 Ncm
Cover screwsHealing components	5 - 10 Ncm Manual/ light finger force

DS PrimeTaper product catalog


Products specifically designed for use with the PrimeTaper EV Implants are presented in this product catalog. For additional products, please refer to the product catalog for Astra Tech Implant System EV.

For more information visit www.dentsplysirona.com



Implants



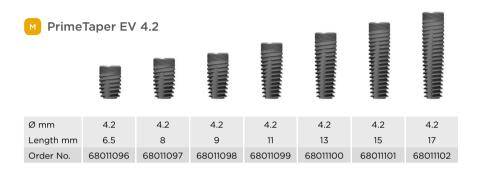






PrimeTaper EV

Titanium¹, sterile

The implants are available in a versatile range of diameters and lengths for all indications, including situations with limited space and/or bone quantity.

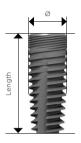







- Specific colors have been assigned to the different implant-abutment connection sizes and are consistently used throughout the system
- OsseoSpeed surface treatment over the entire implant including the micro threads up to the bevel
- Compatible with the restorative assortment of DS Implants and the Astra Tech Implant System with the EV connection

Cover screws

Cover Screw EV

Titanium², sterile




Healing abutments

Healing Abutment EV

Titanium², sterile

- For soft tissue sculpturing during the healing phase
- Color-coded and marked with height
- Laser etched bands for showing height



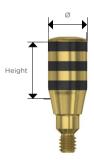

s Healing Abutment EV



M Healing Abutment EV




Healing Abutment EV



HealDesign™ EV


Titanium², sterile

- For soft tissue sculpturing during the healing phase
- Can be used for both one- and two-stage surgery
- Marked with diameter and height

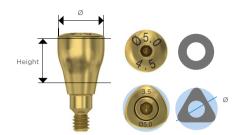

Round shapes are indicated for all positions in the mouth.

Triangular shapes for anterior implant sites to mimic the incisors and canines. The Triangular HealDesign EV is a two-piece abutment.

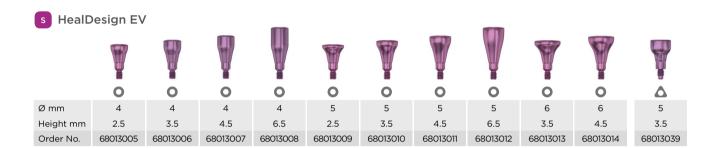





Instruments

Initial drills

Stainless steel³, sterile

- Multiple use with option for single use except for the Precision Drill, which is for single use only
- Used to mark a starting point

Note: The Precision Drill is an extremely sharp drill for single use only. Once out of its package it should never be handled manually or placed on the tray.



Drills

PrimeTaper Drill

Stainless steel³, TiN-coated⁴, sterile

- Laser-etched depth indication lines
- Multiple use with option for single use
- Marked with the respective diameters
- Marked with numbers 1-7

Short




Drilling depth

- The drilling depth is measured from the widest part of the drill tip up to the indication line
- Additional tip depth is maximum
 1.0 mm regardless of the diameter of the drill



Long

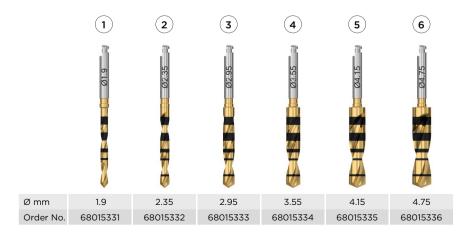

PrimeTaper Tap



Screw taps

PrimeTaper Tap

Stainless steel³, sterile

- Depth marked 6.5 mm
- Multiple use with option for single use
- Marked with the respective diameters

Short



Intermediate drills

PrimeTaper Drill

Stainless steel³, TiN-coated⁴, sterile

- Intermediate twist drills for fine-tuning the diameter of the osteotomy
- Laser-etched depth indication lines
- Multiple use with option for single use
- Marked with the respective diameters

Long



Trays

PrimeTaper Surgical Tray

PPSU plastic⁷, silicone⁸ holders

- Accommodates instruments and components for the complete range of implant lengths and diameters for DS PrimeTaper
- Color-coded and intuitive layout



Size mm	Length 138	Width 190	Height 61.5	
SIZE IIIIII	100	150	01.5	
Order No.	68015321			

PrimeTaper Washtray

Stainless steel 3 , PEEK 6 , silicon 8 , aluminum alloy 5

- Hosts all drills and instruments needed for surgery with DS PrimeTaper
- Accommodates instruments holders, removable overlay and guide




	Length	Width	Height
Size mm	276	176	59
Order No.		68015323	

PrimeTaper Washtray Overlay

Aluminum alloy^s


Used together with the PrimeTaper Washtray

Note: The overlay must be separated from the washtray before cleaning, and re-assembled prior to sterilization. For further information, please refer to the Cleaning and sterilization instruction manual.

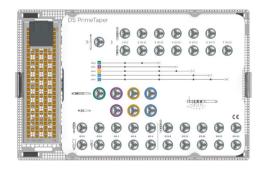

Order No. 68015353

Other surgical instruments

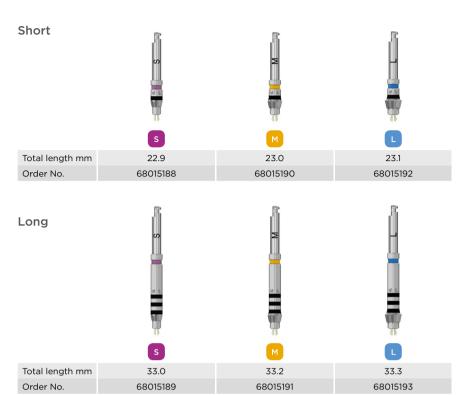



Implant Driver EV

Stainless steel³, PEEK⁶, non-sterile


- For picking up and installing implants
- Color-coded
- Marked with depth indications and connection size
- Dots to facilitate correct positioning

Note: For use with the contra angle or the Torque Wrench EV Surgical Driver Handle

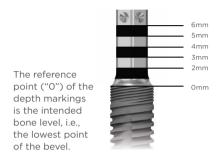

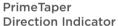




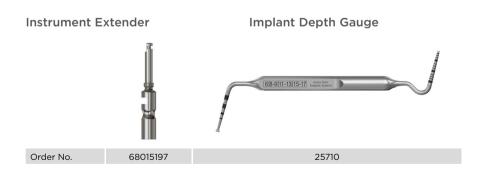

PrimeTaper Direction Indicator

Titanium², non-sterile

Used after drill 1 and drill 3

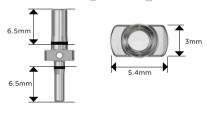

Instrument Extender

Stainless steel³, non-sterile

 Used for extending the length of a drill or the Implant Driver EV

Implant Depth Gauge

Titanium², non-sterile

- One end corresponds to the implant lengths
- One end is a measuring probe with 0-15 mm markings

Note: The 6.5 mm marking is not indicated on the shaft. See page 17 for details.

Torque Wrench EV

Stainless steel³, non-sterile

 Used together with the surgical driver handle

Torque Wrench EV Surgical Driver Handle

Stainless steel³, non-sterile


Used together with the torque wrench

Hex Driver

Stainless steel³, non-sterile

 Used together with a contra angle or the surgical driver handle

Torque Wrench EV Surgical Driver Handle Order No. 25774 25775

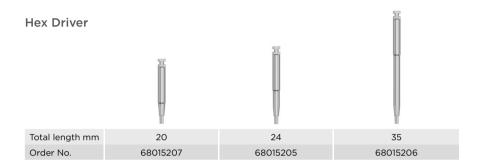

Hex Driver Manual

Stainless steel³, non-sterile

Hex Driver Manual



Mucosal Punch

 $\label{eq:continuous} {\tt Stainless\ steel^3, ABS\ plastic^3, sterile, single-use} \\ {\tt QTY\ 5}$

Mucosal Punch




Ø mm	3.5	4	4.5	5	5.5	6.5
Order No.	25711	25712	25713	25714	25715	25731

PrimeTaper Radiographic Template

PC Plastic¹⁰, non-sterile

- Planning tool prior to implant surgery
- Used together with the X-ray of the patient's jaw
- Magnification range is from 1.0 to 1.5 presented in two separate sheets

PrimeTaper Radiographic Template

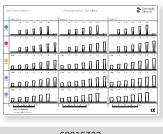

Order No. 68015322

Material specifications

Index $^{\scriptscriptstyle \times}$ will be found at material description for specific products.

Metals

Туре	Index	Composition/Designation	Standard
Titanium	1	Titanium - Grade 4	ASTM F67
Titanium alloy	2	Ti6Al4V Grade 5	ASTM F136
Stainless steel	3	Surgical stainless steel	ASTM F899
TiN Coating	4	Titanium Nitride	
Aluminum alloy	5	AlMg1	

Plastic

Туре	Index	Composition/Designation	Standard
PEEK	6	Polyetereterketon	
PPSU plastic	7	Polyphenylsulfone	
Silicone	8	Polysiloxanes	
ABS plastic	9	Acrylonitrile butadiene styrene	
PC Plastic	10	Polycarbonate	

Index

By order number

Order No.		page	Order No.		page
25710	Implant Depth Gauge	29	68013030	HealDesign EV (L) Ø6.5 6.5mm	25
25711	Mucosal Punch Ø3.5	30	68013031	HealDesign EV (L) Ø7.5 3.5mm	25
25712	Mucosal Punch Ø4.0		68013032	HealDesign EV (L) Ø7.5 4.5mm	
25713	Mucosal Punch Ø4.5		68013039	HealDesign EV (S) Ø5 3.5mm Triangular	
25714	Mucosal Punch Ø5.0		68013040	HealDesign EV (M) Ø5 3.5mm Triangular	
25715	Mucosal Punch Ø5.5		68013041	HealDesign EV (M) Ø6.5 3.5mm Triangular	25
25731	Mucosal Punch Ø6.5	30	68013042	HealDesign EV (L) Ø5 3.5mm Triangular	
25771	Hex Driver 20mm manual		68013043	HealDesign EV (L) Ø6.5 3.5mm Triangular	25
25772	Hex Driver 31mm manual		68013048	Healing Abutment EV (S) 2mm	
25774	Torque Wrench EV		68013049	Healing Abutment EV (S) 3 mm	
25775	Torque Wrench EV Surgical Driver Handle		68013050	Healing Abutment EV (S) 4 mm	
68010002	Cover Screw EV (S)		68013051	Healing Abutment EV (S) 6 mm	
68010005	Cover Screw EV (M)		68013052	Healing Abutment EV (M) 2 mm	
68010006	Cover Screw EV (L)		68013053	Healing Abutment EV (M) 3 mm	
68011090	PrimeTaper EV Ø3.6 x 8mm		68013054	Healing Abutment EV (M) 4 mm	
68011091	PrimeTaper EV Ø3.6 x 9mm		68013055	Healing Abutment EV (M) 6 mm	
68011092	PrimeTaper EV Ø3.6 x 11mm		68013056	Healing Abutment EV (L) 2 mm	
68011093	PrimeTaper EV Ø3.6 x 13mm	23	68013057	Healing Abutment EV (L) 3 mm	
68011094	PrimeTaper EV Ø3.6 x 15mm	23	68013058	Healing Abutment EV (L) 4 mm	24
68011095	PrimeTaper EV Ø3.6 x 17mm	23	68013059	Healing Abutment EV (L) 6 mm	24
68011096	PrimeTaper EV Ø4.2 x 6.5mm	23	68015133	Guide Drill	26
68011097	PrimeTaper EV Ø4.2 x 8mm	23	68015134	Precision Drill	
68011098	PrimeTaper EV Ø4.2 x 9mm	23	68015188	Implant Driver EV (S) short	
68011099	PrimeTaper EV Ø4.2 x 11mm		68015189	Implant Driver EV (S) long	29
68011100	PrimeTaper EV Ø4.2 x 13mm	23	68015190	Implant Driver EV (M) short	29
68011101	PrimeTaper EV Ø4.2 x 15mm	23	68015191	Implant Driver EV (M) long	29
68011102	PrimeTaper EV Ø4.2 x 17mm		68015192	Implant Driver EV (L) short	
68011103	PrimeTaper EV Ø4.8 x 6.5mm	23	68015193	Implant Driver EV (L) long	29
68011104	PrimeTaper EV Ø4.8 x 8mm	23	68015197	Instrument Extender	29
68011105	PrimeTaper EV Ø4.8 x 9mm	23	68015205	Hex Driver 24mm	30
68011106	PrimeTaper EV Ø4.8 x 11mm	23	68015206	Hex Driver 35mm	30
68011107	PrimeTaper EV Ø4.8 x 13mm	23	68015207	Hex Driver 20mm	30
68011108	PrimeTaper EV Ø4.8 x 15mm	23	68015321	PrimeTaper Surgical Tray	28
68011109	PrimeTaper EV Ø4.8 x 17mm	23	68015322	PrimeTaper Radiographic Template	30
68011110	PrimeTaper EV Ø5.4 x 6.5mm	23	68015323	PrimeTaper Washtray	28
68011111	PrimeTaper EV Ø5.4 x 8mm	23	68015324	Drill 1 Ø1.9 short	26
68011112	PrimeTaper EV Ø5.4 x 9mm	23	68015325	PrimeTaper Drill 2 Ø2.35 short	
68011113	PrimeTaper EV Ø5.4 x 11mm	23	68015326	PrimeTaper Drill 3 Ø2.95 short	26
68011114	PrimeTaper EV Ø5.4 x 13mm	23	68015327	PrimeTaper Drill 4 Ø3.55 short	26
68011115	PrimeTaper EV Ø5.4 x 15mm		68015328	PrimeTaper Drill 5 Ø4.15 short	26
68013005	HealDesign EV (S) Ø4 2.5mm	25	68015329	PrimeTaper Drill 6 Ø4.75 short	26
68013006	HealDesign EV (S) Ø4 3.5mm	25	68015330	PrimeTaper Drill 7 Ø5.35 short	26
68013007	HealDesign EV (S) Ø4 4.5mm	25	68015331	Drill 1 Ø1.9 long	26
68013008	HealDesign EV (S) Ø4 6.5mm	25	68015332	PrimeTaper Drill 2 Ø2.35 long	26
68013009	HealDesign EV (S) Ø5 2.5mm	25	68015333	PrimeTaper Drill 3 Ø2.95 long	26
68013010	HealDesign EV (S) Ø5 3.5mm	25	68015334	PrimeTaper Drill 4 Ø3.55 long	26
68013011	HealDesign EV (S) Ø5 4.5mm	25	68015335	PrimeTaper Drill 5 Ø4.15 long	26
68013012	HealDesign EV (S) Ø5 6.5mm	25	68015336	PrimeTaper Drill 6 Ø4.75 long	26
68013013	HealDesign EV (S) Ø6 3.5mm	25	68015337	PrimeTaper Drill 2½ Ø2.65 short	27
68013014	HealDesign EV (S) Ø6 4.5mm	25	68015338	PrimeTaper Drill 3½ Ø3.25 short	27
68013015	HealDesign EV (M) Ø5 2.5mm	25	68015339	PrimeTaper Drill 4½ Ø3.85 short	27
68013016	HealDesign EV (M) Ø5 3.5mm	25	68015340	PrimeTaper Drill 5½ Ø4.45 short	27
68013017	HealDesign EV (M) Ø5 4.5mm	25	68015341	PrimeTaper Drill 6½ Ø5.05 short	27
68013018	HealDesign EV (M) Ø5 6.5mm	25	68015342	PrimeTaper Drill 2½ Ø2.65 long	27
68013019	HealDesign EV (M) Ø6.5 2.5mm	25	68015343	PrimeTaper Drill 3½ Ø3.25 long	27
68013020	HealDesign EV (M) Ø6.5 3.5mm	25	68015344	PrimeTaper Drill 4½ Ø3.85 long	27
68013021	HealDesign EV (M) Ø6.5 4.5mm	25	68015345	PrimeTaper Drill 5½ Ø4.45 long	27
68013022	HealDesign EV (M) Ø6.5 6.5mm	25	68015346	PrimeTaper Drill 6½ Ø5.05 long	27
68013023	HealDesign EV (L) Ø5 2.5mm		68015348	PrimeTaper Tap Ø3.6	27
68013024	HealDesign EV (L) Ø5 3.5mm	25	68015349	PrimeTaper Tap Ø4.2	27
68013025	HealDesign EV (L) Ø5 4.5mm		68015350	PrimeTaper Tap Ø4.8	27
68013026	HealDesign EV (L) Ø5 6.5mm		68015351	PrimeTaper Tap Ø5.4	
68013027	HealDesign EV (L) Ø6.5 2.5mm		68015352	PrimeTaper Direction Indicator	
68013028	HealDesign EV (L) Ø6.5 3.5mm		68015353	PrimeTaper Washtray Overlay	
68013029	HealDesign EV (L) Ø6.5 4.5mm		1	-	

Alphabetical order

Order No.		page	Order No.		page
68010002	Cover Screw EV (S)	24	25712	Mucosal Punch Ø4.0	30
68010005	Cover Screw EV (M)	24	25713	Mucosal Punch Ø4.5	30
68010006	Cover Screw EV (L)	24	25714	Mucosal Punch Ø5.0	30
68015331	Drill 1 Ø1.9 long	26	25715	Mucosal Punch Ø5.5	30
68015324	Drill 1 Ø1.9 short	26	25731	Mucosal Punch Ø6.5	30
58015133	Guide Drill	26	68015134	Precision Drill	26
68013023	HealDesign EV (L) Ø5 2.5mm	25	68015352	PrimeTaper Direction Indicator	29
68013024	HealDesign EV (L) Ø5 3.5mm	25	68015332	PrimeTaper Drill 2 Ø2.35 long	
68013042	HealDesign EV (L) Ø5 3.5mm Triangular		68015325	PrimeTaper Drill 2 Ø2.35 short	26
68013025	HealDesign EV (L) Ø5 4.5mm	25	68015342	PrimeTaper Drill 2½ Ø2.65 long	27
68013026	HealDesign EV (L) Ø5 6.5mm	25	68015337	PrimeTaper Drill 2½ Ø2.65 short	27
68013027	HealDesign EV (L) Ø6.5 2.5mm	25	68015333	PrimeTaper Drill 3 Ø2.95 long	26
68013028	HealDesign EV (L) Ø6.5 3.5mm		68015326	PrimeTaper Drill 3 Ø2.95 short	26
68013043	HealDesign EV (L) Ø6.5 3.5mm Triangular	25	68015343	PrimeTaper Drill 3½ Ø3.25 long	27
68013029	HealDesign EV (L) Ø6.5 4.5mm	25	68015338	PrimeTaper Drill 3½ Ø3.25 short	27
68013030	HealDesign EV (L) Ø6.5 6.5mm		68015334	PrimeTaper Drill 4 Ø3.55 long	
68013031	HealDesign EV (L) Ø7.5 3.5mm		68015327	PrimeTaper Drill 4 Ø3.55 short	
68013032	HealDesign EV (L) Ø7.5 4.5mm		68015344	PrimeTaper Drill 4½ Ø3.85 long	
68013015	HealDesign EV (M) Ø5 2.5mm		68015339	PrimeTaper Drill 4½ Ø3.85 short	
68013016	HealDesign EV (M) Ø5 3.5mm		68015335	PrimeTaper Drill 5 Ø4.15 long	
68013040	HealDesign EV (M) Ø5 3.5mm Triangular		68015328	PrimeTaper Drill 5 Ø4.15 short	
68013017	HealDesign EV (M) Ø5 4.5mm		68015345	PrimeTaper Drill 5½ Ø4.45 long	
68013018	HealDesign EV (M) Ø5 6.5mm		68015340	PrimeTaper Drill 5½ Ø4.45 short	
68013019	HealDesign EV (M) Ø6.5 2.5mm		68015336	PrimeTaper Drill 6 Ø4.75 long	
68013020	HealDesign EV (M) Ø6.5 3.5mm		68015329	PrimeTaper Drill 6 Ø4.75 short	
68013041	HealDesign EV (M) Ø6.5 3.5mm Triangular		68015346	PrimeTaper Drill 6½ Ø5.05 long	
68013041	HealDesign EV (M) Ø6.5 4.5mm		68015341	PrimeTaper Drill 6½ Ø5.05 short	
68013022	HealDesign EV (M) Ø6.5 6.5mm		68015330	PrimeTaper Drill 7 Ø5.35 short	
68013005	HealDesign EV (S) Ø4 2.5mm		68011090	PrimeTaper EV Ø3.6 x 8mm	
68013006	HealDesign EV (S) Ø4 3.5mm		68011091	PrimeTaper EV Ø3.6 x 9mm	
68013007	HealDesign EV (S) Ø4 4.5mm		68011092	PrimeTaper EV Ø3.6 x 11mm	
68013007	HealDesign EV (S) Ø4 6.5mm		68011093	PrimeTaper EV Ø3.6 x 13mm	
68013009	HealDesign EV (S) Ø5 2.5mm		68011093	PrimeTaper EV Ø3.6 x 15mm	
68013009	HealDesign EV (S) Ø5 3.5mm		68011094	PrimeTaper EV Ø3.6 x 17mm	
68013039	HealDesign EV (S) Ø5 3.5mm Triangular		68011096	PrimeTaper EV Ø4.2 x 6.5mm	
68013039	HealDesign EV (S) Ø5 4.5mm		68011097	PrimeTaper EV Ø4.2 x 8mm	
68013011	HealDesign EV (S) Ø5 6.5mm		68011097	PrimeTaper EV Ø4.2 x 9mm	
68013012	HealDesign EV (S) Ø6 3.5mm		68011098	PrimeTaper EV Ø4.2 x 911111	
68013013	HealDesign EV (S) Ø6 4.5mm		68011099	PrimeTaper EV Ø4.2 x 13mm	
68013014	Healing Abutment EV (L) 2 mm		68011101	PrimeTaper EV Ø4.2 x 15mm	
68013057	Healing Abutment EV (L) 3 mm		68011101	PrimeTaper EV Ø4.2 x 17mm	
	-			PrimeTaper EV Ø4.2 x 1/mm	
68013058 68013059	Healing Abutment EV (L) 4 mm		68011103		
	Healing Abutment EV (L) 6 mm		68011104	PrimeTaper EV Ø4.8 x 8mm PrimeTaper EV Ø4.8 x 9mm	
68013052	Healing Abuttee and EV (M) 2 mm		68011105		
68013053	Healing Abuttee and EV (M) 3 mm		68011106	PrimeTaper EV Ø4.8 x 11mm	
68013054	Healing Abutment EV (M) 4 mm		68011107	PrimeTaper EV Ø4.8 x 13mm	
68013055	Healing Abutment EV (M) 6 mm		68011108	PrimeTaper EV Ø4.8 x 15mm	
68013048	Healing Abutment EV (S) 2mm		68011109	PrimeTaper EV Ø4.8 x 17mm	
68013049	Healing Abutment EV (S) 3 mm		68011110	PrimeTaper EV Ø5.4 x 6.5mm	
68013050	Healing Abutment EV (S) 4 mm		68011111	PrimeTaper EV Ø5.4 x 8mm	
68013051	Healing Abutment EV (S) 6 mm		68011112	PrimeTaper EV Ø5.4 x 9mm	
68015207	Hex Driver 20mm		68011113	PrimeTaper EV Ø5.4 x 11mm	
25771	Hex Driver 20mm manual		68011114	PrimeTaper EV Ø5.4 x 13mm	
68015205	Hex Driver 24mm		68011115	PrimeTaper EV Ø5.4 x 15mm	
25772	Hex Driver 31mm manual		68015322	PrimeTaper Radiographic Template	
68015206	Hex Driver 35mm		68015321	PrimeTaper Surgical Tray	
25710	Implant Depth Gauge		68015348	PrimeTaper Tap Ø3.6	
68015193	Implant Driver EV (L) long		68015349	PrimeTaper Tap Ø4.2	
68015192	Implant Driver EV (L) short		68015350	PrimeTaper Tap Ø4.8	
68015191	Implant Driver EV (M) long		68015351	PrimeTaper Tap Ø5.4	
68015190	Implant Driver EV (M) short	29	68015323	PrimeTaper Washtray	
68015189	Implant Driver EV (S) long	29	68015353	PrimeTaper Washtray Overlay	28
58015188	Implant Driver EV (S) short	29	25774	Torque Wrench EV	30
58015197	Instrument Extender	29	25775	Torque Wrench EV Surgical Driver Handle	30
25711	Mucosal Punch Ø3.5		==		

Notes		

Notes	