



Astra Tech Implant System®

Manual and product catalog

Repair procedures

Removal and retrieval of screw fragment,
abutment and implant

Astra Tech Implant System®

CONTENTS

Introduction	5
Remove/retrieve on implant-level	
Workflow - Abutment screw fracture in an implant	6
STEP 1 - Using Fragment Fork and Thread Cleaner	8
STEP 2 - Using Fragment Drill, Fragment Fork and Thread Cleaner	10
STEP 3 - Using Fragment Drill, Screw Extractor and Thread Cleaner	12
STEP 4 - Removal of an OsseoSpeed EV implant	14
STEP 4 - Removal of an OsseoSpeed TX implant	15
Remove/retrieve on abutment-level	
Workflow - Bridge screw fracture in an abutment	16
STEP 1 - Using Fragment Fork and Thread Cleaner	18
STEP 2 - Using Fragment Drill, Fragment Fork and Thread Cleaner	20
STEP 3 - Removal of Uni Abutment EV	22
Removal of undamaged abutments with removal grooves	23
Removal of undamaged abutments without removal grooves	24
Remove/retrieve	
Retrieval of damaged abutment	25
Retrieval of damaged implant	26
Torque Wrench - handling	27
Cleaning and sterilization	28
Product Catalog	29
Compatibility table	30
Index	36

This manual is designed for use by clinicians who have undergone at least basic prosthetic and in-clinic implant training. Staying current on the latest trends and treatment techniques in implant dentistry through continued education is the responsibility of the clinician.

All products may not be regulatory cleared/released/licensed in all markets. Please, contact the local Dentsply Sirona sales office for current product assortment and availability.

To improve readability for our customers, Dentsply Sirona does not use ® or ™ in body copy. However, Dentsply Sirona does not waive any right to the trademark and nothing herein shall be interpreted to the contrary.

Product illustrations are not to scale.

Introduction

For different reasons abutments, implants or screws occasionally need to be removed and/or replaced. The Astra Tech Implant System has a wide selection of different abutments to meet specific clinical situations. Provided the abutment screw is undamaged, cement-retained abutments can be easily removed, in most cases, using a hex screwdriver.

This manual covers products in the OsseoSpeed TX and OsseoSpeed EV assortment.



General information

This manual contains detailed instructions and illustrations on how to remove, retrieve and recondition components.

Consider the following:

- Be patient, allow ample time and schedule the visit carefully.
- Magnifying glasses should be considered.
- Carefully consider the possible reasons for the situation which has occurred.

The manual is divided in two different workflows: Remove/retrieve on implant-level and Remove/retrieve on abutment-level. Each workflow process describes step-by-step procedures. The following procedures are structured in the order from minor to major impact on components and surrounding tissue.



**Remove/retrieve on
implant-level**





**Remove/retrieve on
abutment-level**



Note: The products and instruments for repair procedures are delivered non-sterile. Before use, the products/instruments must be cleaned and sterilized. Most of the products are single-use; for detailed information about which products are single-use only and those which are not, refer to the product catalog section.

Workflow - Abutment screw fracture in an implant

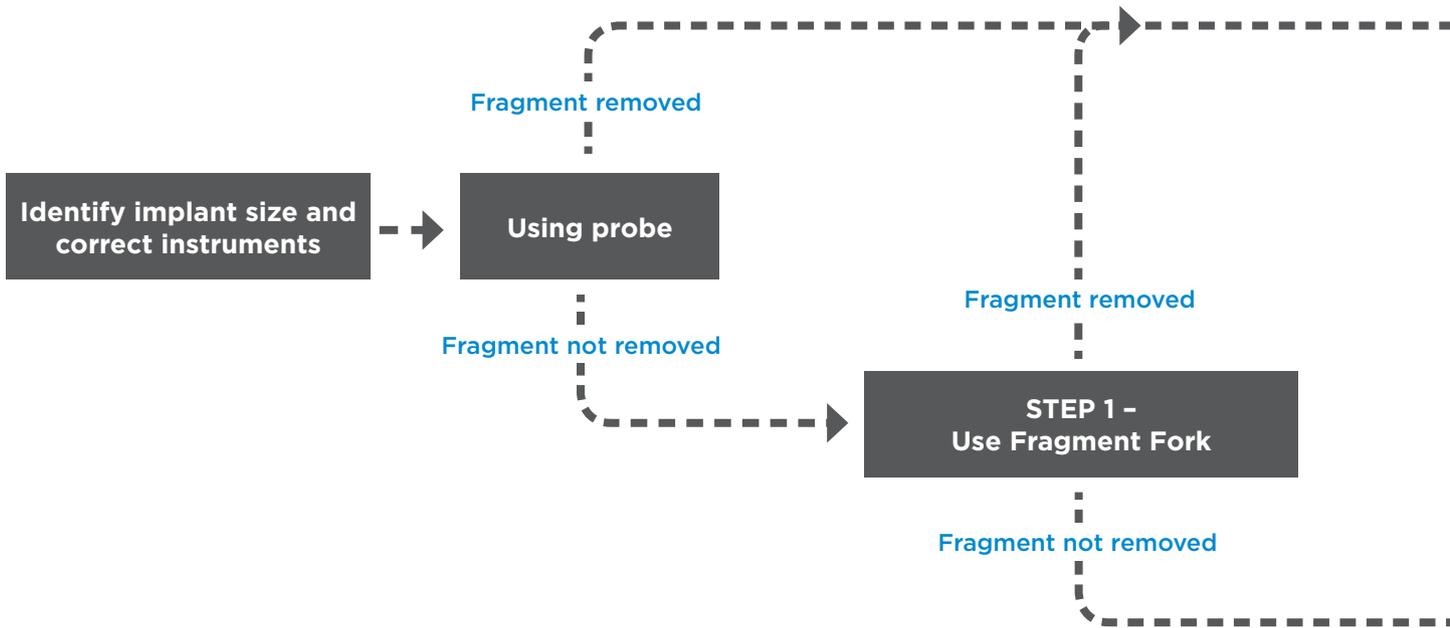

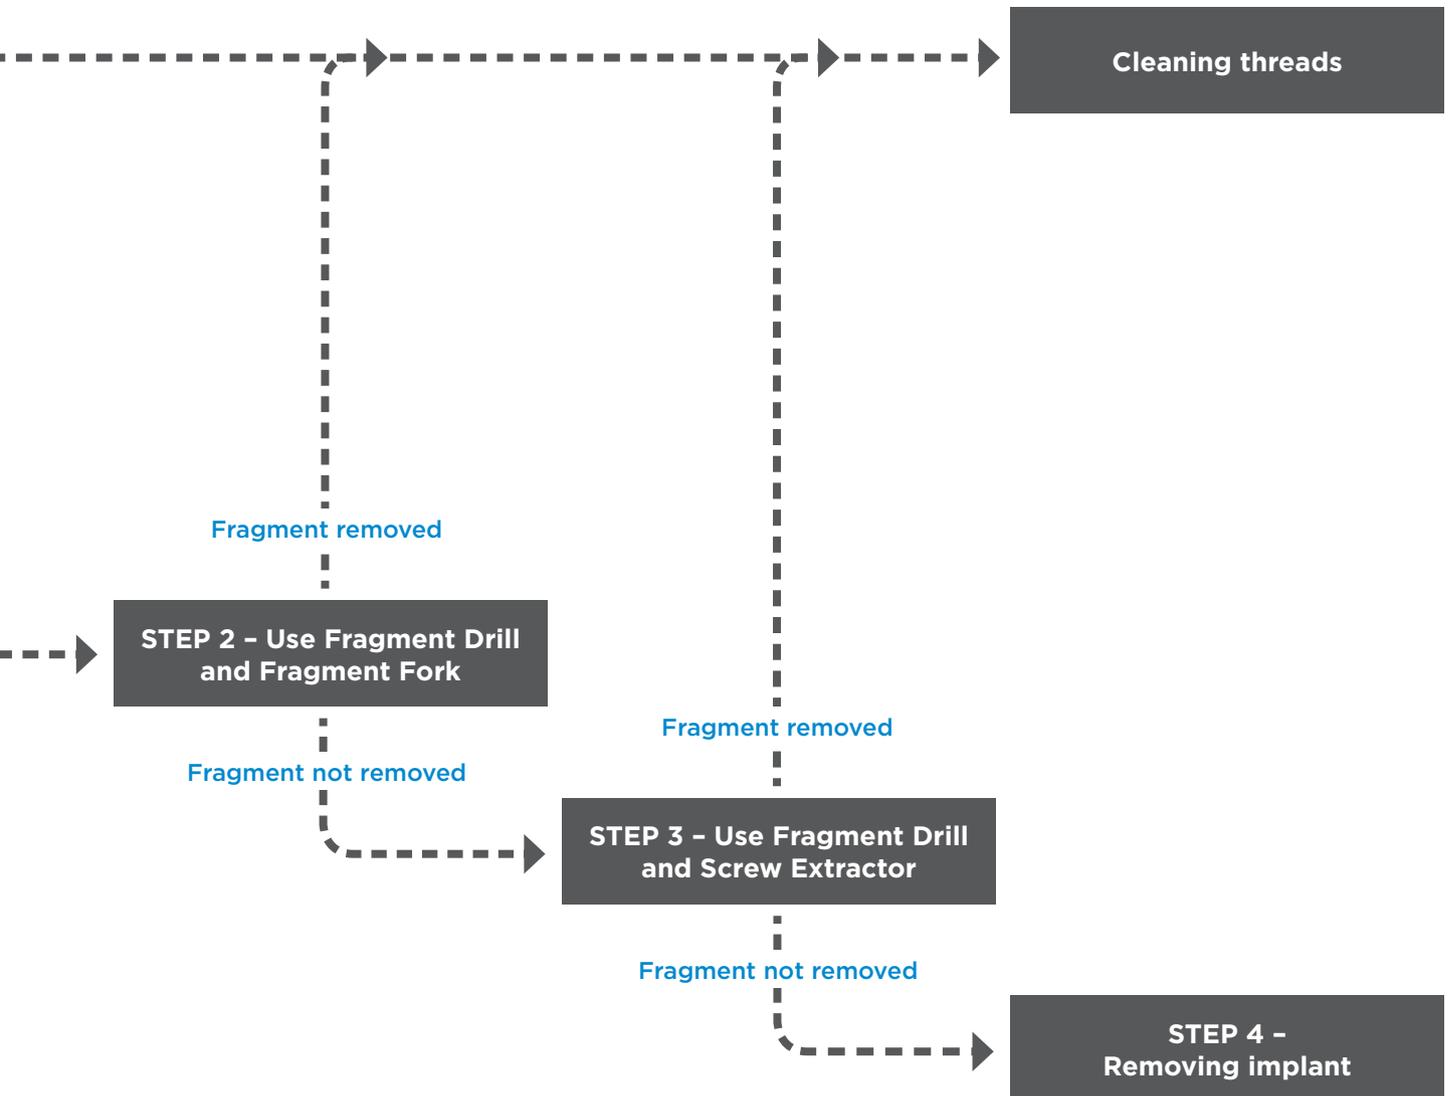

Abutment screw fracture in an implant

Screw fractures may occur in implants when unfavorable stress or forces are applied. The remaining screw fragments may be retrieved with Fragment Fork instruments. The Fragment Fork is designed to be used counter-clockwise and can often be used without damaging the implant threads.

The following steps describe the step-by-step procedures for retrieval of an abutment screw fragment in an OsseoSpeed EV 3.6 implant.

Identify the size of the implant and use the instruments accordingly (see the compatibility table on page 29).

Start by using a sharp probe to evaluate the mobility of the fragment and try to remove the screw fragment from the implant by rotating it in a counter-clockwise direction.



STEP 1



Connect and adjust

- Connect, adjust and lock the Guiding Cylinder Handle firmly into the ball joint of the Guiding Cylinder EV.

Insert

- Insert the guiding cylinder into the implant and hold it firmly.
- Ensure that the cylinder is aligned with the vertical axis of the implant throughout the whole procedure.

Attach the Fragment Fork

- Attach the Fragment Fork into the Restorative Driver Handle EV.



Using Fragment Fork

- Manually rotate the Fragment Fork in a counter-clockwise direction while pressing towards the screw fragment through the Guiding Cylinder.
- When the fragment is loose, continue unscrewing the screw fragment.
- Remove the guide and retrieve the fragment with a pair of forceps or similar instrument.

Note: If the fragment cannot be removed, go to Step 2 using the Fragment Drill.

Attach Thread Cleaner

- Attach the appropriate Thread Cleaner into the Restorative Driver Handle EV.
- Insert the Thread Cleaner carefully into the implant by hand and make sure that it engages properly into the threads.

Thread cleaning

- Work the whole length of the thread intermittently with the Thread Cleaner, half of a turn at a time, and reverse in between to clean the threads and remove possible fragments.

Abutment screw fracture in an implant

Drill with the Fragment Drill to make an indentation in the screw fragment as a starting point for the Fragment Fork.



STEP 2



Connect and adjust


- Connect, adjust and lock the Guiding Cylinder Handle firmly into the ball joint of the Guiding Cylinder EV.

Insert

- Insert the Guiding Cylinder into the implant and hold it firmly.
- Ensure that the cylinder is aligned with the vertical axis of the implant throughout the whole procedure.

Attach Fragment Drill

- Connect the Fragment Drill into the contra angle (contra angle 20:1).
- **Drill counter-clockwise** with the Fragment Drill through the Guiding Cylinder with the **drilling equipment set at 1500 rpm**.
- Ensure that the indentation is centered in the screw fragment.
- Work intermittently with the drill and in between clean out possible fragments.
- Drill gently until a small cavity/indentation is created in the screw fragment.

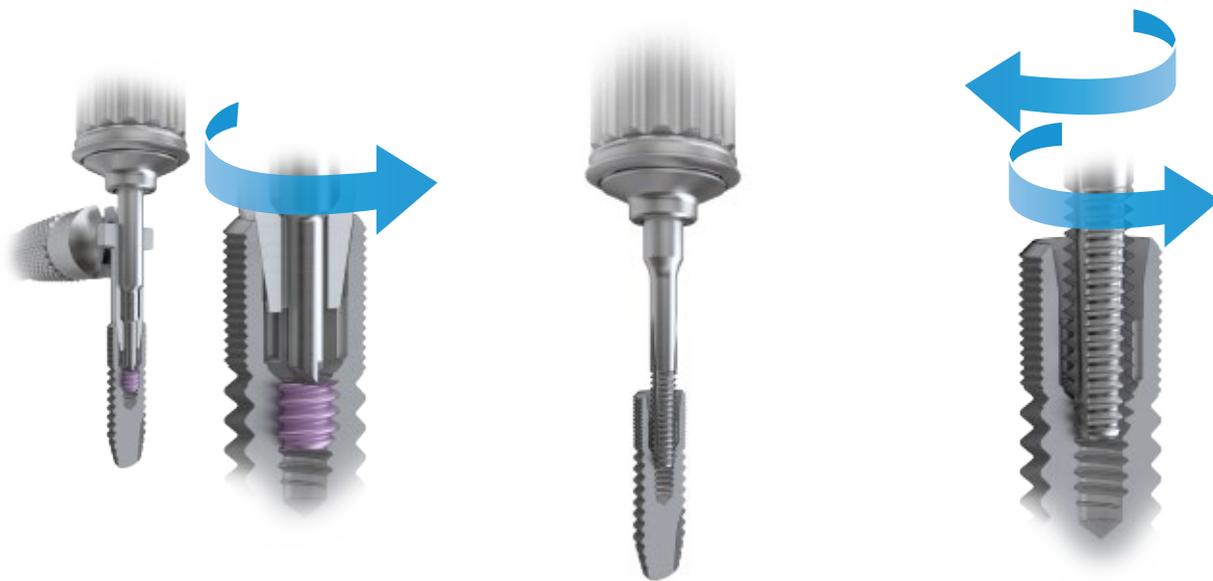

Fragment Fork

- Attach the Fragment Fork into the Restorative Driver Handle EV.
- Manually rotate the Fragment Fork counter-clockwise while pressing towards the screw fragment through the Guiding Cylinder.
- When the fragment is loose, continue unscrewing the screw fragment.
- Remove the guide and retrieve the fragment with a pair of forceps or similar instrument.

Note: If the fragment cannot be removed, go to Step 3, using the Screw Extractor.

Attach Thread Cleaner

- Attach the appropriate Thread Cleaner into the Restorative Driver Handle EV.
- Insert the Thread Cleaner carefully into the implant by hand and make sure that it engages properly in the threads.

Thread cleaning


- Work the whole length of the thread intermittently with the Thread Cleaner half of a turn at a time and reverse in between to clean the threads and remove possible fragments.

Abutment screw fracture in an implant

Drill with the Fragment Drill to make an indentation in the screw fragment for the Screw Extractor.



STEP 3

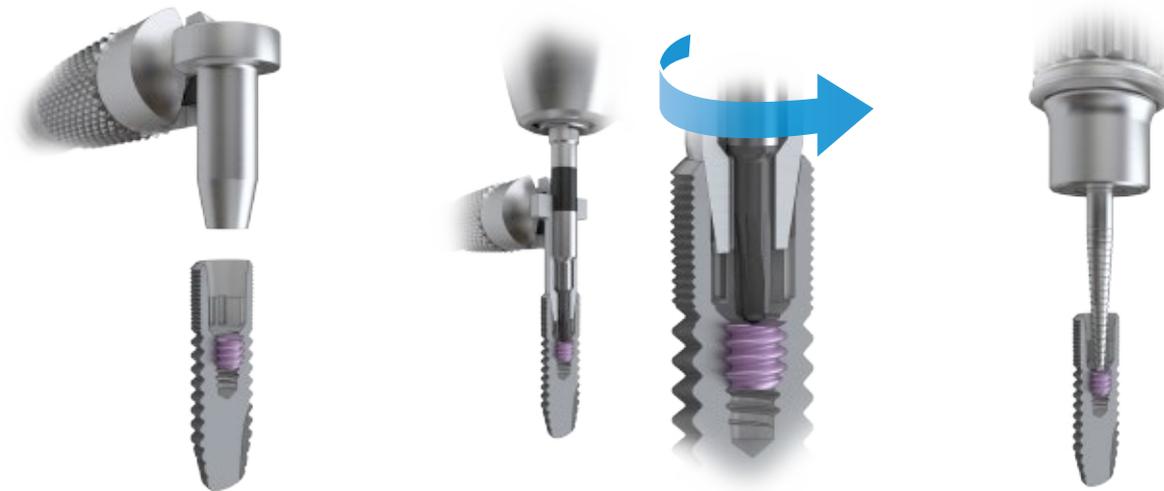

Connect, adjust and insert

- Connect, adjust and lock the Guiding Cylinder Handle into the ball joint of the Guiding Cylinder EV.
- Insert the Guiding Cylinder into the implant and hold it firmly.
- Ensure that the cylinder is aligned with the vertical axis of the implant throughout the whole procedure.

Fragment Drill

- Connect the Fragment Drill into the contra angle (contra angle).
- **Drill counter-clockwise** with the fragment drill through the Guiding Cylinder with the **drilling equipment set at 1500 rpm**.
- Ensure that the indentation is centered in the screw fragment.
- Work intermittently with the drill and in between clean out possible fragments.
- Drill gently until a full depth cavity is created in the screw fragment. The drill limit is reached when the upper end of the black marking is in line with the upper end of the cylinder.

Attach the Screw Extractor

- Attach the Screw Extractor into the Surgical Driver Handle.
- Make sure that the Screw Extractor is correctly placed into the handle. The hexagonal part of the shaft shall be fully inserted into the handle.



Using the Screw Extractor

- Manually turn the Screw Extractor counter-clockwise into the fragment.
- Use the Torque Wrench EV as a ratchet wrench and turn counter-clockwise.
- Maintain downward pressure on the Screw Extractor.

Note: If the fragment cannot be removed, go to Step 4, removing the implant.

Attach Thread Cleaner

- Attach the appropriate Thread Cleaner into the Restorative Driver Handle EV.
- Insert the Thread Cleaner carefully into the implant by hand and make sure that it engages properly in the threads.

Thread cleaning

- Work the whole length of the thread intermittently with the Thread Cleaner half of a turn at a time and reverse in between to clean the threads and remove possible fragments.


Removal of an OsseoSpeed® EV implant

If all other methods to remove a partly or fully integrated implant are unsuccessful, a final option is to use a trephine drill to remove the implant.

This procedure should be used at the lowest possible speed under profuse irrigation and with the bone exposed for optimal visibility.



STEP 4

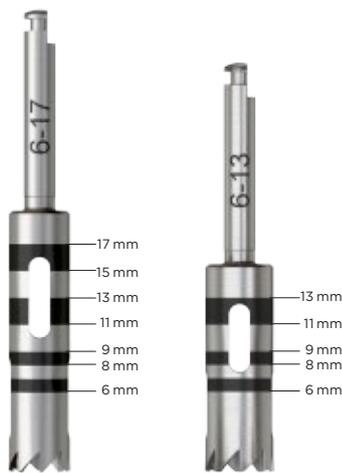

Trephine Drill

- Markings: Diameter and length.

Select Trephine Drill

- Select the appropriate Trephine Drill and mount it into a contra angle (contra angle 20:1).
- **Drill under profuse irrigation at the lowest possible speed (a maximum of 300 rpm)**
- Make sure to follow the axis of the implant.

Using Trephine Drill

- Creating a starting groove in the periphery of the implant with a bur or similar can be a guide to help the trephine drilling.
- Continue to drill until the top of the implant reaches the appropriate depth marking.
- Lift out the implant with a pair of forceps or other appropriate instrument.

Removal of an OsseoSpeed® TX implant

If all other methods to remove a partly or fully integrated implant are unsuccessful, a final option is to trephine out the implant. This procedure should be used at the lowest possible speed under profuse irrigation and with the bone exposed for optimal visibility.


The Trephine Drill have slots that serve as depth markings. Please see the illustration below.



Trephine Drill
3.5, 4.0 and 5.0.

Use Trephine Drill 5.0 for
implant 4.5.

STEP 4

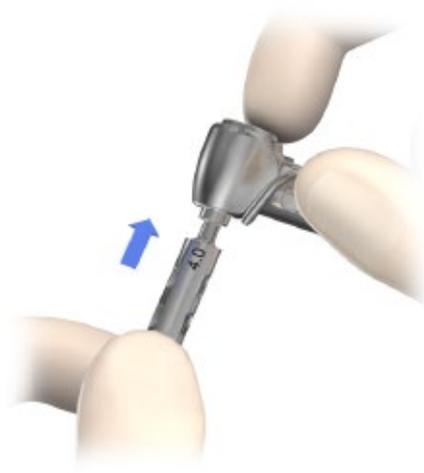

Trephine Drill

- The Trephine Drill has depth markings, and diameter


Select Trephine Drill


- Select the appropriate trephine drill and mount it into a contra angle.
- **Drill under profuse irrigation at the lowest possible speed (a maximum of 300 rpm).**
- Make sure to follow the axis of the implant.

Using Trephine Drill

- Creating a starting groove in the periphery of the implant with a bur or similar can be a guide to help the trephine drilling.
- Continue to drill until the top of the implant reaches the appropriate depth marking.
- Lift out the implant with a pair of forceps or any other appropriate instrument.

Workflow - Bridge screw fracture in an abutment

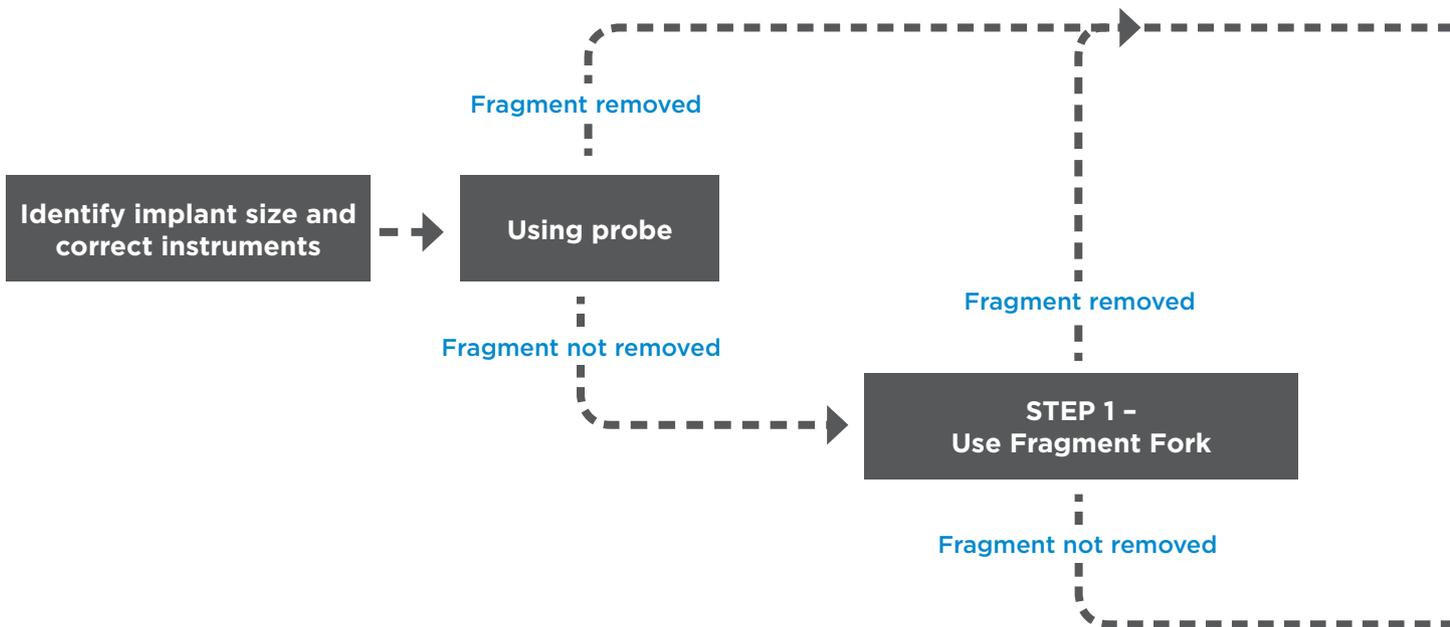

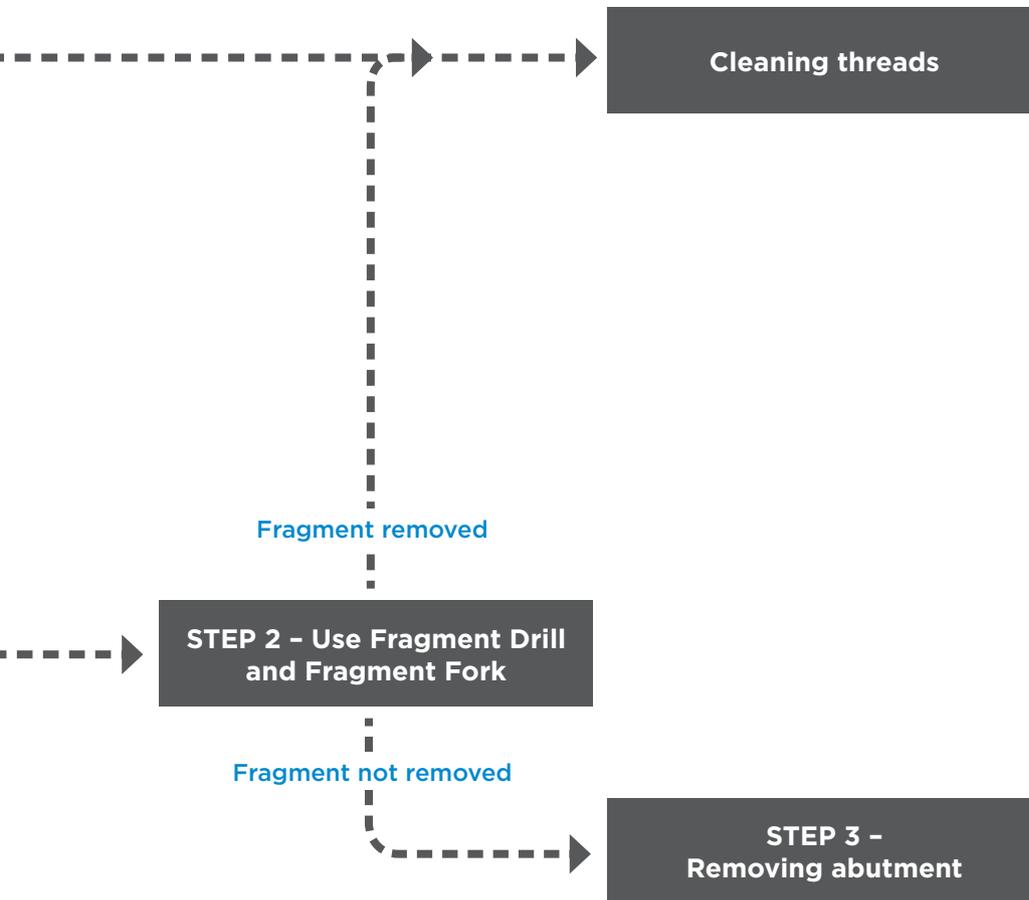

Bridge screw fracture in a Uni Abutment

Screw fractures may occur in abutments when unfavorable stress or forces are applied. The remaining screw fragments may be retrieved with Fragment Fork instruments. The Fragment Fork is designed to be used counter-clockwise and can often be used without damaging the threads.

The following steps describe the step-by-step procedures for retrieval of a bridge screw fragment in a Uni Abutment EV.

Identify the size of the implant/abutment and use the instruments accordingly (see the compatibility table on page 29).

Start by using a sharp probe to evaluate the mobility of the fragment and try to remove the screw fragment from the abutment by rotating it in a counter-clockwise direction.



STEP 1



Connect and adjust

- Connect, adjust and lock the Guiding Cylinder Handle firmly into the ball joint of the Guiding Cylinder EV.

Place

- Place the guiding cylinder onto the abutment and hold it firmly.
- Ensure that the cylinder is aligned with the vertical axis of the abutment throughout the whole procedure.

Attach the Fragment Fork

- Attach the Fragment Fork into the Restorative Driver Handle EV.



Using Fragment Fork

- Manually rotate the Fragment Fork in a counter-clockwise direction while pressing towards the screw fragment through the Guiding Cylinder.
- When the fragment is loose, continue unscrewing the screw fragment.

Note: If the fragment cannot be removed, go to Step 2, using the Fragment Drill.

Attach Thread Cleaner

- Attach the appropriate Thread Cleaner into the Restorative Driver Handle EV.
- Insert the thread cleaner carefully into the screw hole by hand and make sure that it engages properly in the threads.

Thread cleaning

- Work the whole length of the thread intermittently with the Thread Cleaner half of a turn at a time and reverse in between to clean the threads and remove possible fragments.

Bridge screw fracture in an abutment

Drill with the Fragment Drill to make an indentation in the screw fragment as a starting point for the Fragment Fork.



STEP 2



Connect and adjust

- Connect, adjust and lock the Guiding Cylinder Handle firmly into the ball joint of the Guiding Cylinder EV.

Place

- Place the guiding cylinder onto the implant and hold it firmly.
- Ensure that the cylinder is aligned with the vertical axis of the abutment throughout the whole procedure.

Attach Fragment Drill

- Attach the Fragment Drill into the contra angle (contra angle 20:1).
- **Drill counter-clockwise** with the fragment drill through the guiding cylinder and the **drilling equipment set at 1500 rpm**.
- Ensure that the indentation is centered in the screw fragment.
- Work intermittently with the drill and in between clean out possible fragments.
- Drill gently until a small cavity/indentation is created in the screw fragment.



Using Fragment Fork

- Attach the Fragment Fork into the Restorative Driver Handle EV.
- **Manually rotate the Fragment Fork in a counter-clockwise direction** while pressing towards the screw fragment through the Guiding Cylinder.
- When the fragment is loose, continue unscrewing the screw fragment.
- Remove the guide and retrieve the fragment with a pair of forceps or similar instrument.

Note: If the fragment cannot be removed, go to Step 3 and remove the abutment using the Rescue Driver Uni Abutment EV.

Attach Thread Cleaner

- Attach the appropriate Thread Cleaner to the Restorative Driver Handle EV.
- Insert the thread cleaner carefully into the screw hole by hand and make sure that it engages properly in the threads.

Thread cleaning

- Work the whole length of the thread intermittently with the Thread Cleaner half of a turn at a time and reverse in between to clean the threads and remove possible fragments.

Removal of Uni Abutment EV

Use the Rescue Driver Uni Abutment EV to remove the abutment.



STEP 3



Rescue Driver Uni Abutment EV

- Use the Rescue Driver Uni Abutment EV for Uni Abutment EV.

Attach

- Insert the Rescue Driver Uni Abutment EV into the Surgical Driver Handle and into the wrench until there is an audible click.
- Make sure that the driver is correctly placed into the handle. The hexagonal part of the shaft shall be fully inserted into the handle.
- The arrow on the head of the wrench shows the direction in which the wrench is functioning and should be in "out" reverse mode.




Using Rescue Driver Uni Abutment EV

- Use the Torque Wrench EV as a ratchet wrench to reverse the abutment.
- Note:** The driver does not have any pick-up function; lift the abutment with a pair of forceps or other appropriate instrument.

Removal of undamaged abutments *with* removal grooves

Abutments for screw-retention supplied with removal grooves, i.e. UniAbutments and Cresco Inserts within the Astra Tech Implant System, can be removed with the Removal Tool M1.4.

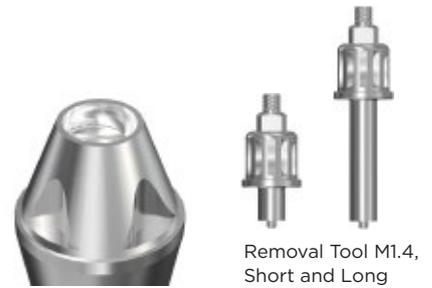

STEP 3



Removal Tool M1.4

- Place the Removal Tool M1.4 on the abutment/insert. Make sure the ridges in the Removal Tool seat properly and engage the removal grooves in the abutment/insert.
- Tighten the screw with a Hex Screwdriver.

Using Removal Tool

- Use either the open-end Wrench or the Restorative Driver Handle 4x4 low and the Torque Wrench EV together and attach to the Removal Tool.
- Release the abutment/insert by turning it counter-clockwise with a firm, short movement.

Remove

- Unscrew manually when the abutment/insert is loose.
- To remove the abutment/insert from the Removal Tool, loosen the screw, which will separate the parts.

Removal of undamaged abutments pre EV assortment *without* removal grooves


UniAbutments without removal grooves, can be removed using an Abutment Adapter. This instrument can also be used for UniAbutments and Cresco Inserts with removal grooves.



Abutment Adapter Short
REF 24424



Abutment Adapter Long
REF 24370



Wrench
REF 22124

STEP 3



Prepare the Abutment Adapter

- Adjust the lock nut of the adapter until a gap is visible between the O-ring and the metal (1-2 mm).
- Make sure to keep the gap while mounting the adapter to the abutment/insert with finger light torque.

Note: Do not compress the O-ring.

Using the wrenchs

- Attach the open-end wrench on the lock nut and attach any of the ratcheting wrenches in the "IN" position onto the adapter head. Tighten/activate the adapter by moving the two instruments towards each other.
- When tightened/activated, use the wrench on the lock nut with a firm, short movement counter-clockwise to release the abutment.

Release the abutment

- When the abutment is released, manually unscrew the abutment completely.
- Detach the adapter from the abutment with the open-end wrench and any of the ratchet alternatives in the "OUT" position. Move the instruments away from each other to loosen/deactivate the adapter.


Retrieval of damaged abutments

While the methods previously described can be used for removing fractured UniAbutments 20°/45° and Creco inserts with intact threads, in most cases, using a UniAbutment Retriever is a more efficient method. A UniAbutment Retriever must also be used to retrieve abutments with damaged threads.

Note: Using an Abutment Retriever for undamaged abutments with undamaged threads will cause damage to the threads during retrieval and the abutment will need to be replaced.



UniAbutment Retriever

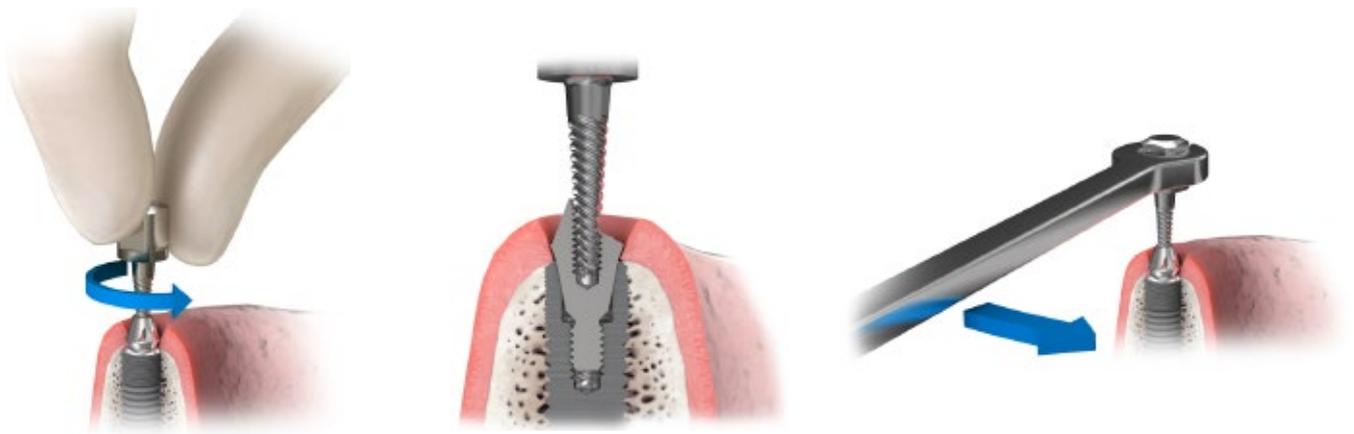

UniAbutment Retriever

- Place the UniAbutment Retriever in the threaded hole of the abutment and turn counter-clockwise while pressing down until it friction fits in the threads.

Using UniAbutment Retriever


- In situations when only a short fraction of the screw hole remains, it may be difficult to achieve enough friction. In such instances, cut or grind off some of the instrument tip and try again.

Remove

- Use either the open-end Wrench or the Restorative Driver Handle 4x4 low and the Torque Wrench EV together and attach to the UniAbutment Retriever. Continue the counter-clockwise rotation while maintaining a downward pressure until the abutment loosens.
- Continue manually until the abutment is completely detached.

Retrieval of damaged implants

Removal of damaged implants or implants with damaged internal threads may require alternative methods, e.g., the use of the Implant Retriever. The Implant Retriever will fit in any of current or earlier implant product lines. It is designed to squeeze in the threaded area and create a friction grip when rotated counter-clockwise.

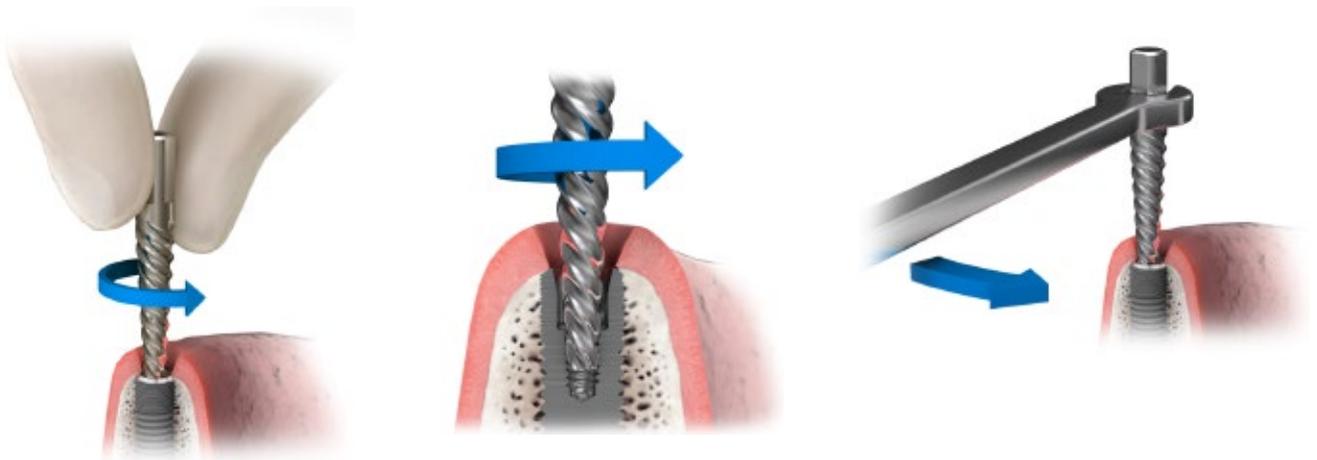

Implant Retriever

- Place the Implant Retriever in the threaded area of the implant and turn counter-clockwise while pressing the retriever down until it sticks in position.

Using Implant Retriever

- In situations where only a short fraction of the screw hole remains, it may be difficult to achieve enough friction. In such instances, cut or grind off some of the instrument tip and try again.

Remove

- Use either the open-end Wrench or the Restorative Driver Handle 4x4 low and the Torque Wrench EV together and attach to the Implant Retriever. Continue the rotation while maintaining a downward pressure until the implant starts to rotate.
- Continue until the implant is out of the bone.

Torque Wrench EV – handling

A torque wrench together with the driver handle is used for the repair procedures.



Assemble

- Insert the Hex Driver EV or appropriate product / instrument into the Restorative Driver Handle and then into the wrench until there is an audible click.

Handling

- Use a finger on the top of the driver handle to keep it steady and in place. Then gently pull the arm of the torque wrench in the direction of the arrow until the desired torque is achieved.

Note: The arm of the torque wrench must not go beyond the end of the scale as this could result in inaccurate torque readings.

Note: The arrow on the head of the wrench shows the direction in which the wrench is functioning.



Disassemble

- Remove the driver from the wrench.
- Remove the head by pressing a finger into the recess (1) and gently pulling the head (2).

Cleaning and drying

- The three separated parts are now ready for cleaning using water and a brush. Let the parts dry.

Sterilization

- Follow the manufacturer's instructions for use.

Cleaning and sterilization

Cleaning and sterilization before use

The products and instruments for repair procedures are delivered non-sterile. Before use, the non-sterile products must be cleaned and sterilized.

Remove residual tissue or bone debris by immersing the used products in lukewarm water (<40°C/104°F).

Do not use fixation agents or hot water as this could influence subsequent cleaning results. Products should be kept in a wet environment until the next step is initiated.

Note: Single use products should not be reused.

If cleaning is delayed more than 120 minutes, place the devices in a bath of a cleaning and disinfection solution to avoid drying of soil and/or debris, blood and other contaminations.

The Guiding Cylinder Handle must be disassembled before cleaning.

Manual procedure

Apply detergent, Neodisher MediClean-Forte (Dr. Weigert, Hamburg) or similar solution to all surfaces. Scrub the outer and, if applicable, the inner side of the product with a soft bristled nylon brush until all visible soil and/or debris is removed. Flush the inner channels/lumen with cleaning solution using an irrigation needle connected to a syringe. Check channels/lumen for residual soil and/or debris. Run the products in an ultra-sonic bath with cleaning solution for a minimum of ten minutes, drills and trays excluded. Rinse under clean running water until all trace of cleaning solution is removed. Flush the inner channels/lumen with water using an irrigation needle.

Prepare a bath with a disinfection solution, ID212 instrument disinfection (DÜRR SYSTEM-HYGIENE) or similar, according to the detergent manufacturer's instructions. Immerse the products completely for the time specified by the manufacturer. Flush the internal channels/lumen using an irrigation needle for a minimum of 3 times. Rinse under clean running water until all trace of disinfection solution is removed. Flush the inner channels/lumen with water using an irrigation needle.

Dry the products using medical compressed air and clean lint-free single-use wipes.

Automated procedure

Place instruments in a washer-disinfector, Vario TD or similar, according to recommendations from the supplier. The Vario TD washing program, found below, will serve as an example:

- Pre-wash, 20°C
- Cleaning with detergent, Neodisher MediClean-Forte (Dr. Weigert, Hamburg) or similar solution at 45-55°C
- Neutralization
- Intermediate rinse
- Disinfection, >90°C (preferable 93°C), 5 min
- Drying

Inspection and function testing

Discard blunt or damaged products.

Packaging pre-sterilization

Thoroughly dry everything prior to the sterilization process to prevent the risk of corrosion. Wrapping the instruments according to the sterilization wrap manufacturer's instructions and applicable products in a sterilization bag is recommended.

Note: For the US: Use a FDA cleared sterilization bag and 16 minutes drying time at the end of the steam sterilization cycle.

Sterilization

Steam sterilization with a pre-vacuum cycle (134°C/275°F for 3 minutes).

Storage

The products should be stored in their package in a dry place, at normal temperature (18-25°C/64-77°F). Use the sterilized components from the sterile bag manufacturer within the stated time period.

Note: Follow the manufacturer's instructions for the maintenance and cleaning of the Contra Angles and the Torque Wrench EV.

Product catalog

Repair procedures

If you need drills and other instruments, please refer to the Product catalogs for Astra Tech Implant System EV and Astra Tech Implant System.



Compatibility table

Identify the implant/abutment size for OsseoSpeed EV or OsseoSpeed TX assortment.

Select the corresponding instruments; see the order number in the table below.

Astra Tech Implant System® EV

	OsseoSpeed EV					OsseoSpeed Profile EV		Uni Abutment EV
								
	3.0	3.6	4.2	4.8	5.4	P _{4.2}	P _{4.8}	
Fragment Fork	25856	25856	25857	25857	25857	25857	25857	25857
Fragment Drill	25858	25858	25859	25859	25859	25859	25859	25859
Screw Extractor	25860	25860	25861	25861	25861	25861	25861	N/A
Thread Cleaner	25862	25863	25864	25865	25865	25864	25865	25864
Trephine Drill	25866	25867	25886 25868	25887 25869	25888 25870	25886 25868	25887 25869	N/A
Rescue Driver Uni Abutment EV								25794

Astra Tech Implant System®

	OsseoSpeed TX				OsseoSpeed TX Profile	20°/45° Uni Abutment
						
	3.0	3.5	4.0	4.5 5.0	4.5/5.0	
Fragment Fork	25856	25856	25856	25857	25857	25856
Fragment Drill	25858	25858	25858	25859	25859	25858
Screw Extractor	25860	25860	25860	25861	25861	N/A
Thread Cleaner	25862	25863	25863	25865	25865	25862
Trephine Drill	25866	22884	22885	22890	22890	N/A
Retriever	22429	22192	22192	22192	22192	22429

Instruments to remove/retrieve screw fragments

Guiding Cylinder EV




Guiding Cylinder EV

Stainless steel, non-sterile, single-use only

- Guides the instruments into the center of the fragment
- Protects the internal threads in the implant
- Marked with diameter and EV
- Use together with Guiding Cylinder Handle and Fragment Drill or Fragment Fork for OsseoSpeed EV implants

Guiding Cylinder Uni Abutment EV

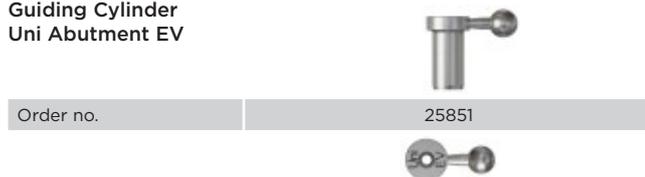

Guiding Cylinder Uni Abutment EV

Stainless steel, non-sterile, single-use only

- Guides the instruments into the center of the fragment
- Protects the internal threads in the abutment
- Marked with diameter and EV
- Use together with Guiding Cylinder Handle and Fragment Drill or Fragment Fork for Uni Abutment EV in Astra Tech Implant System EV

Guiding Cylinder Handle




Guiding Cylinder Handle

Stainless steel, non-sterile

- Adjustable handle for Guiding Cylinders

Guiding Cylinder TX

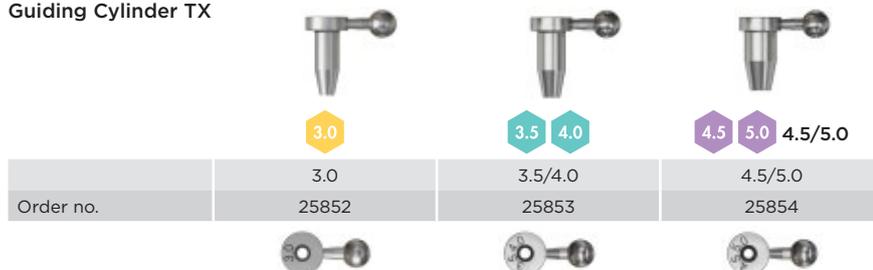

Guiding Cylinder TX

Stainless steel, non-sterile, single-use only

- Guides the instruments into the center of the fragment
- Protects the internal threads in the implant
- Marked with diameter
- Use together with Guiding Cylinder Handle and Fragment Drill or Fragment Fork for OsseoSpeed TX implants

Guiding Cylinder UniAbutment 20°/45°



Guiding Cylinder UniAbutment 20°/45°

Stainless steel, non-sterile, single-use only

- Guides the instruments into the center of the fragment
- Protects the internal threads in the abutment
- Marked with diameter and TX
- Use together with Guiding Cylinder Handle and Guiding Fragment Drill or Fragment Fork for UniAbutment 20°/45° in Astra Tech Implant System

Product catalog

Instruments to remove/retrieve screw fragments/Instruments to clean internally threads

Fragment Fork

Tungsten-Carbide, non-sterile, single-use only

- Used for retrieval of factured abutment- and bridge screws fragment
- For manual use only
- Rotate the Fragment Fork counter-clockwise
- Marked with thread size
- Use together with Restorative Driver Handle EV

Note: Manual use only.

Fragment Fork



Ø	0.8	1.0
Order no.	25856	25857



	Thin	Wide
Ø	1.0	1.4
Order no.	22122	22632

Fragment Drill

Shank: Stainless steel
Cutting portion: Tungsten-Carbide
Non-sterile, single-use only

- Used for creating an indentation in the abutment- or bridge screw fragment
- Drill counter-clockwise
- Marked with diameter

Fragment Drill



Ø	0.8	1.0
Order no.	25858	25859

Screw Extractor

Stainless steel, non-sterile, single-use only

- Used for retrieval of abutment screw fragments
- Rotate the screw extractor counter-clockwise
- Marked with diameter
- Use together with Surgical Driver Handle EV

Note: Manual use only.

Screw Extractor



Ø	0.8	1.0
Order no.	25860	25861

Instruments to clean internal threads

Thread Cleaner



	M1.4	M1.6	M1.8	M2.0
Order no.	25862	25863	25864	25865

Thread Cleaner

Stainless steel, non-sterile, single-use only

- Used for cleaning of threads internally in an implant/abutment
- Marked with thread size
- Use together with Restorative Driver Handle EV

Note: Manual use only.

Instruments to remove/retrieve abutments

Rescue Driver Uni Abutment EV



Order no.	25794
-----------	-------

Rescue Driver Uni Abutment EV

Stainless steel, non-sterile

- Used for retrieval of Uni Abutment EV

Removal Tool M1.4



	Short	Long
Length mm	18	30
Order no.	24021	24037

Removal Tool M1.4

Stainless steel, non-sterile

- For removal of UniAbutment 20° and 45° with grooves and Cresco Insert 20° and 45°
- Use together with Ratchet Wrench/ Torque Wrench/Surgical Wrench or Wrench (22124)

Abutment Adapter



	Short	Long
Length mm	25	35
Order no.	24424	24370

Abutment Adapter

Stainless steel, non-sterile

- For removal of UniAbutment 20° and 45° without grooves
- Use together with Ratchet Wrench/ Torque Wrench/Surgical Wrench or Wrench (22124)

Instruments to remove/retrieve implants

Trephine Drill

Stainless steel, non-sterile, single-use only

- Used for the retrieval of partly or fully integrated OsseoSpeed EV implants.
- Marked with diameter and length.



Trephine Drill



Length mm	6-17mm	6-17mm	6-13mm	6-17mm	6-13mm	6-17mm	6-13mm	6-17mm
Inner Ø mm	3.2	3.8	4.4	4.4	5.0	5.0	5.6	5.6
Outer Ø mm	4.0	4.6	5.2	5.2	5.8	5.8	6.4	6.4
Order no.	25866	25867	25886	25868	25887	25869	25888	25870

*Note: Same drill for all 3.0 implants and single-use only.

Trephine Drill

Stainless steel, non-sterile

- Used for the retrieval of partly or fully integrated implants.
- Marked with diameter and length.



Trephine Drill



Length mm	6-17 mm	3.5	4.0	4.5 5.0 4.5/5.0
Inner Ø mm	3.2	3.65	4.2	5.15
Outer Ø mm	4.0	4.5	5.1	6.15
Order no.	25866	22884	22885	22890

*Note: Same drill for all 3.0 implants and single-use only.

Abutment Retriever

Stainless steel, non-sterile, single-use only

- Use together with a Wrench.

Abutment Retriever



Order no.	22429
-----------	-------

Implant Retriever

Stainless steel, non-sterile, single-use only

- Use together with a Wrench.

Implant Retriever



Order no.	22192
-----------	-------

General instruments

Torque Wrench EV



Order no.	25774
-----------	-------

Torque Wrench EV

Stainless steel, non-sterile

- Use together with a Driver Handle.

Torque Wrench EV, Surgical Driver Handle



Ø mm	8.9
Length mm	15.3
Order no.	25775

Torque Wrench EV, Restorative Driver Handle



Ø mm	8.9	8.9
Length mm	15.5	11.5
Order no.	25776	25777

Torque Wrench EV, Restorative Driver Handle 4x4 low



Ø mm	8.9
Length mm	9.7
Order no.	25730

Torque Wrench EV, Surgical Driver Handle

Stainless steel, non-sterile

Torque Wrench EV, Restorative Driver Handle 4x4 low

Stainless steel, non-sterile

Hex Driver EV Manual



	Short	Intermediate	Long
Total length mm	20	31	38
Order no.	25771	25772	25773

Hex Driver EV Manual

Stainless steel, non-sterile

Wrench



Order no.	22124
-----------	-------

Wrench

Titanium, non-sterile

- Use together with an adapter and/or retriever.

Explanation of the symbols on labels and instructions for use

Symbol	Text
 Date of manufacture	Date of manufacture.
	Legal manufacturer
 Use by	Expiry date.
STERILE R	Sterilized using irradiation.
Rx Only	Caution: Federal (USA) law restricts this product to sale by or on a order of a dentist.
 Single use	Do not re-use, Single use only.
 Do not re-sterilize	Do not re-sterilize.
	GOST is the valid quality certification system in Russian Federation.

Symbol	Text
	Astra Tech Implant System® products carry the CE mark and fulfill the requirements of the Medical Device Directive.
 Do not use if package is damaged	Do not use if package is damaged.
 For instructions for use and symbols glossary refer to ifu.dentsplysirona.com	Consult instructions for use.*
	Consult instructions for use.
LOT	LOT/BATCH number.
REF	Article number.
	Contains article number (GTIN number), lot number and quantity.

* To read PDF files you will need Adobe Reader. Download free of charge at get.adobe.com/reader.

Index

Order by reference number

REF		page
22122	Fragment Fork, Thin	32
22124	Wrench	35
22192	Implant Retriever	34
22429	Abutment Retriever	34
22632	Fragment Fork, Wide	32
22884	Trephine Drill 3.5	34
22885	Trephine Drill 4.0	34
22890	Trephine Drill 5.0	34
24021	Removal Tool M1.4, short	33
24037	Removal Tool M1.4, long	33
24370	Abutment Adapter, long	33
24424	Abutment Adapter, short	33
25730	Torque Wrench EV, Restorative Driver Handle 4x4 low	35
25771	Hex Driver EV, short manual	35
25772	Hex Driver EV, intermediate manual	35
25773	Hex Driver EV, long manual	35
25774	Torque Wrench EV	35
25775	Torque Wrench EV, Surgical Driver Handle	35
25776	Torque Wrench EV, Restorative Driver Handle	35
25777	Torque Wrench EV, Restorative Driver Handle	35
25794	Rescue Driver UniAbutment EV	33
25846	Guiding Cylinder EV 3.0	31
25847	Guiding Cylinder EV 3.6	31
25848	Guiding Cylinder EV 4.2	31
25849	Guiding Cylinder EV 4.8	31
25850	Guiding Cylinder EV 5.4	31
25851	Guiding Cylinder EV Uni Abutment	31
25852	Guiding Cylinder 3.0	31
25853	Guiding Cylinder 3.5/4.0	31
25854	Guiding Cylinder 4.5/5.0	31
25855	Guiding Cylinder Handle	31
25856	Fragment Fork Ø0.8	32
25857	Fragment Fork Ø1.0	32
25858	Fragment Drill Ø0.8	32
25859	Fragment Drill Ø1.0	32
25860	Screw Extractor Ø0.8	32
25861	Screw Extractor Ø1.0	32
25862	Thread Cleaner M1.4	33
25863	Thread Cleaner M1.6	33
25864	Thread Cleaner M1.8	33
25865	Thread Cleaner M2.0	33
25866	Trephine Drill 3.0, 6-17 mm	34
25867	Trephine Drill 3.6, 6-17 mm	34
25868	Trephine Drill 4.2, 6-17 mm	34
25869	Trephine Drill 4.8, 6-17 mm	34
25870	Trephine Drill 5.4, 6-17 mm	34
25884	Guiding Cylinder UniAbutment 20°	32
25885	Guiding Cylinder UniAbutment 45°	32
25886	Trephine Drill 4.2, 6-13 mm	34
25887	Trephine Drill 4.8, 6-13 mm	34
25888	Trephine Drill 5.4, 6-13 mm	34

Alphabetical order

REF		page
24370	Abutment Adapter, long	33
24424	Abutment Adapter, short	33
22429	Abutment Retriever	34
25856	Fragment Fork Ø0.8	32
25857	Fragment Fork Ø1.0	32
22122	Fragment Fork, Thin	32
22632	Fragment Fork, Wide	32
25858	Fragment Drill Ø0.8	32
25859	Fragment Drill Ø1.0	32
25852	Guiding Cylinder 3.0	31
25853	Guiding Cylinder 3.5/4.0	31
25854	Guiding Cylinder 4.5/5.0	31
25846	Guiding Cylinder EV 3.0	31
25847	Guiding Cylinder EV 3.6	31
25848	Guiding Cylinder EV 4.2	31
25849	Guiding Cylinder EV 4.8	31
25850	Guiding Cylinder EV 5.4	31
25851	Guiding Cylinder EV Uni Abutment	31
25855	Guiding Cylinder Handle	31
25884	Guiding Cylinder UniAbutment 20°	32
25885	Guiding Cylinder UniAbutment 45°	32
25771	Hex Driver EV, short manual	35
25772	Hex Driver EV, intermediate manual	35
25773	Hex Driver EV, long manual	35
22192	Implant Retriever	34
24021	Removal Tool M1.4, short	33
24037	Removal Tool M1.4, long	33
25794	Rescue Driver UniAbutment EV	33
25860	Screw Extractor Ø0.8	32
25861	Screw Extractor Ø1.0	32
25862	Thread Cleaner M1.4	33
25863	Thread Cleaner M1.6	33
25864	Thread Cleaner M1.8	33
25865	Thread Cleaner M2.0	33
25774	Torque Wrench EV	35
25776	Torque Wrench EV, Restorative Driver Handle	35
25777	Torque Wrench EV, Restorative Driver Handle	35
25730	Torque Wrench EV, Restorative Driver Handle 4x4 low	35
25775	Torque Wrench EV, Surgical Driver Handle	35
25866	Trephine Drill 3.0, 6-17 mm	34
22884	Trephine Drill 3.5	34
25867	Trephine Drill 3.6, 6-17 mm	34
22885	Trephine Drill 4.0	34
25886	Trephine Drill 4.2, 6-13 mm	34
25868	Trephine Drill 4.2, 6-17 mm	34
25887	Trephine Drill 4.8, 6-13 mm	34
25869	Trephine Drill 4.8, 6-17 mm	34
22890	Trephine Drill 5.0	34
25888	Trephine Drill 5.4, 6-13 mm	34
25870	Trephine Drill 5.4, 6-17 mm	34
22124	Wrench	35

About Dentsply Sirona Implants

Dentsply Sirona Implants offers comprehensive solutions for all phases of implant therapy, including Ankylos®, Astra Tech Implant System® and Xive® implant lines, digital technologies, such as Atlantis® patient-specific solutions and Simplant® guided surgery, Symbios® regenerative solutions, and professional and business development programs, such as STEPPS™. Dentsply Sirona Implants creates value for dental professionals and allows for predictable and lasting implant treatment outcomes, resulting in enhanced quality of life for patients.

About Dentsply Sirona

Dentsply Sirona is the world's largest manufacturer of professional dental products and technologies, with a 130-year history of innovation and service to the dental industry and patients worldwide. Dentsply Sirona develops, manufactures, and markets a comprehensive solutions offering including dental and oral health products as well as other consumable medical devices under a strong portfolio of world class brands. As The Dental Solutions Company™, Dentsply Sirona's products provide innovative, high-quality and effective solutions to advance patient care and deliver better, safer and faster dentistry. Dentsply Sirona's global headquarters is located in York, Pennsylvania, and the international headquarters is based in Salzburg, Austria. The company's shares are listed in the United States on NASDAQ under the symbol XRAY.

Visit www.dentsplysirona.com for more information about Dentsply Sirona and its products.